

# INDEX

## INDEX - Alphabetical Listing of Electrical Circuits

	SCHEMATIC	COMPONENT LOCATION		SCHEMATIC	COMPONENT LOCATION
Air Injection Management ...	109.....	201	Lights (continued)		
Automatic Antenna .....	131.....	202	—Glove Box .....	123.....	203
Automatic Climate Control...	127		—Hazard .....	116.....	207
Auxiliary Fan .....	126.....	204	—Headlights .....	112.....	203
Charging System .....	110.....	202	—Instrument Cluster.....	118.....	204
Cigar Lighter .....	131.....	202	—License .....	115.....	205
Clock .....	120.....	207	—Marker .....	115.....	205
Cruise Control .....	113.....	207	—Park .....	114.....	205
Fuel Delivery .....	107.....	204	—Stop .....	113.....	207
Fuse Information .....	102		—Tail .....	114.....	205
Gauges .....	118.....	207	—Trunk .....	115.....	205
Ground Distribution .....	133		—Turn Signal .....	116.....	207
Heated Seats .....	132.....	203	Power Distribution .....	104.....	206
Horns .....	126.....	204	Power Windows .....	129.....	206
Idle Speed Stabilization .....	109.....	201	Radio .....	131.....	202
Ignition .....	107.....	204	Rear Defogger .....	128.....	206
Lambda Control .....	108.....	205	Sliding Roof .....	128.....	206
Lights			Start .....	106.....	206
—Backup .....	111.....	202	Tachometer .....	118	
—Center Console .....	119, 124 .....	204	Transmission Kickdown .....	111.....	202
—Courtesy .....	121 .....	203	Warning Indicators .....	118.....	207
—Fog Lights .....	112 .....	203	Warning System .....	117.....	208
			Wiper/Washer .....	125.....	208



## Fuse-Circuit List

Fuse		Circuits Protected	Page
No.	Amps (color)		
1	8(WT)	Automatic Antenna	131
		Clock	119
		Courtesy Lights	121
		Lights: Hazard	116
		Radio	131
		Trunk Light	115
		Warning System	117
2	16(PK)	Auxiliary Fan	126
3	16(PK)	Power Windows	129
4	16(PK)	Power Windows	129
5	16(PK)	Horns	126
		Sliding Roof	128
6	16(PK)	Automatic Climate Control	127
7	16(PK)	Heated Seats	132
		Rear Defogger	128
8	8(WT)	Backup Lights/Transmission Kickdown	111
		Warning System	117
9		NOT USED	
10	8(WT)	Auxiliary Fan	126
		Lights: Turn Signal	116
		Power Windows	129
		Stoplights/Cruise Control	113
		Warning Indicators/Gauges	118

Fuse		Circuits Protected	Page
No.	Amps (color)		
11	16(PK)	Headlights/Fog Lights	112
		Wiper/Washer	125
12	8(WT) *16(PK)	Cigar Lighter/Radio	131
		Glove Box Light	123
		*With Heated Seats	132
13	8(WT)	Illumination: Instrument Cluster/ Center Console	204
		Lights: Marker/License	115
		Lights: Park/Tail (RH)	114
14	2	NOT USED	126
15	16(PK)	NOT USED	
16	8(WT)	Lights: Park/Tail (LH)	114
17	8(WT)	Headlights (RH High Beam)	112
18	8(WT)	Headlights (LH High Beam)	112
19	16(PK)	Headlights (RH Low Beam)/Fog Lights	112
20	8(WT)	Headlights (LH Low Beam)	112
AUX FUSE BOX	2	Automatic Climate Control	127

 


(For Component Locations See Page 207)






(For Component Locations See Page 208)





# WARNING INDICATORS/GAUGES/CLOCK


(For Component Locations See Page 207)

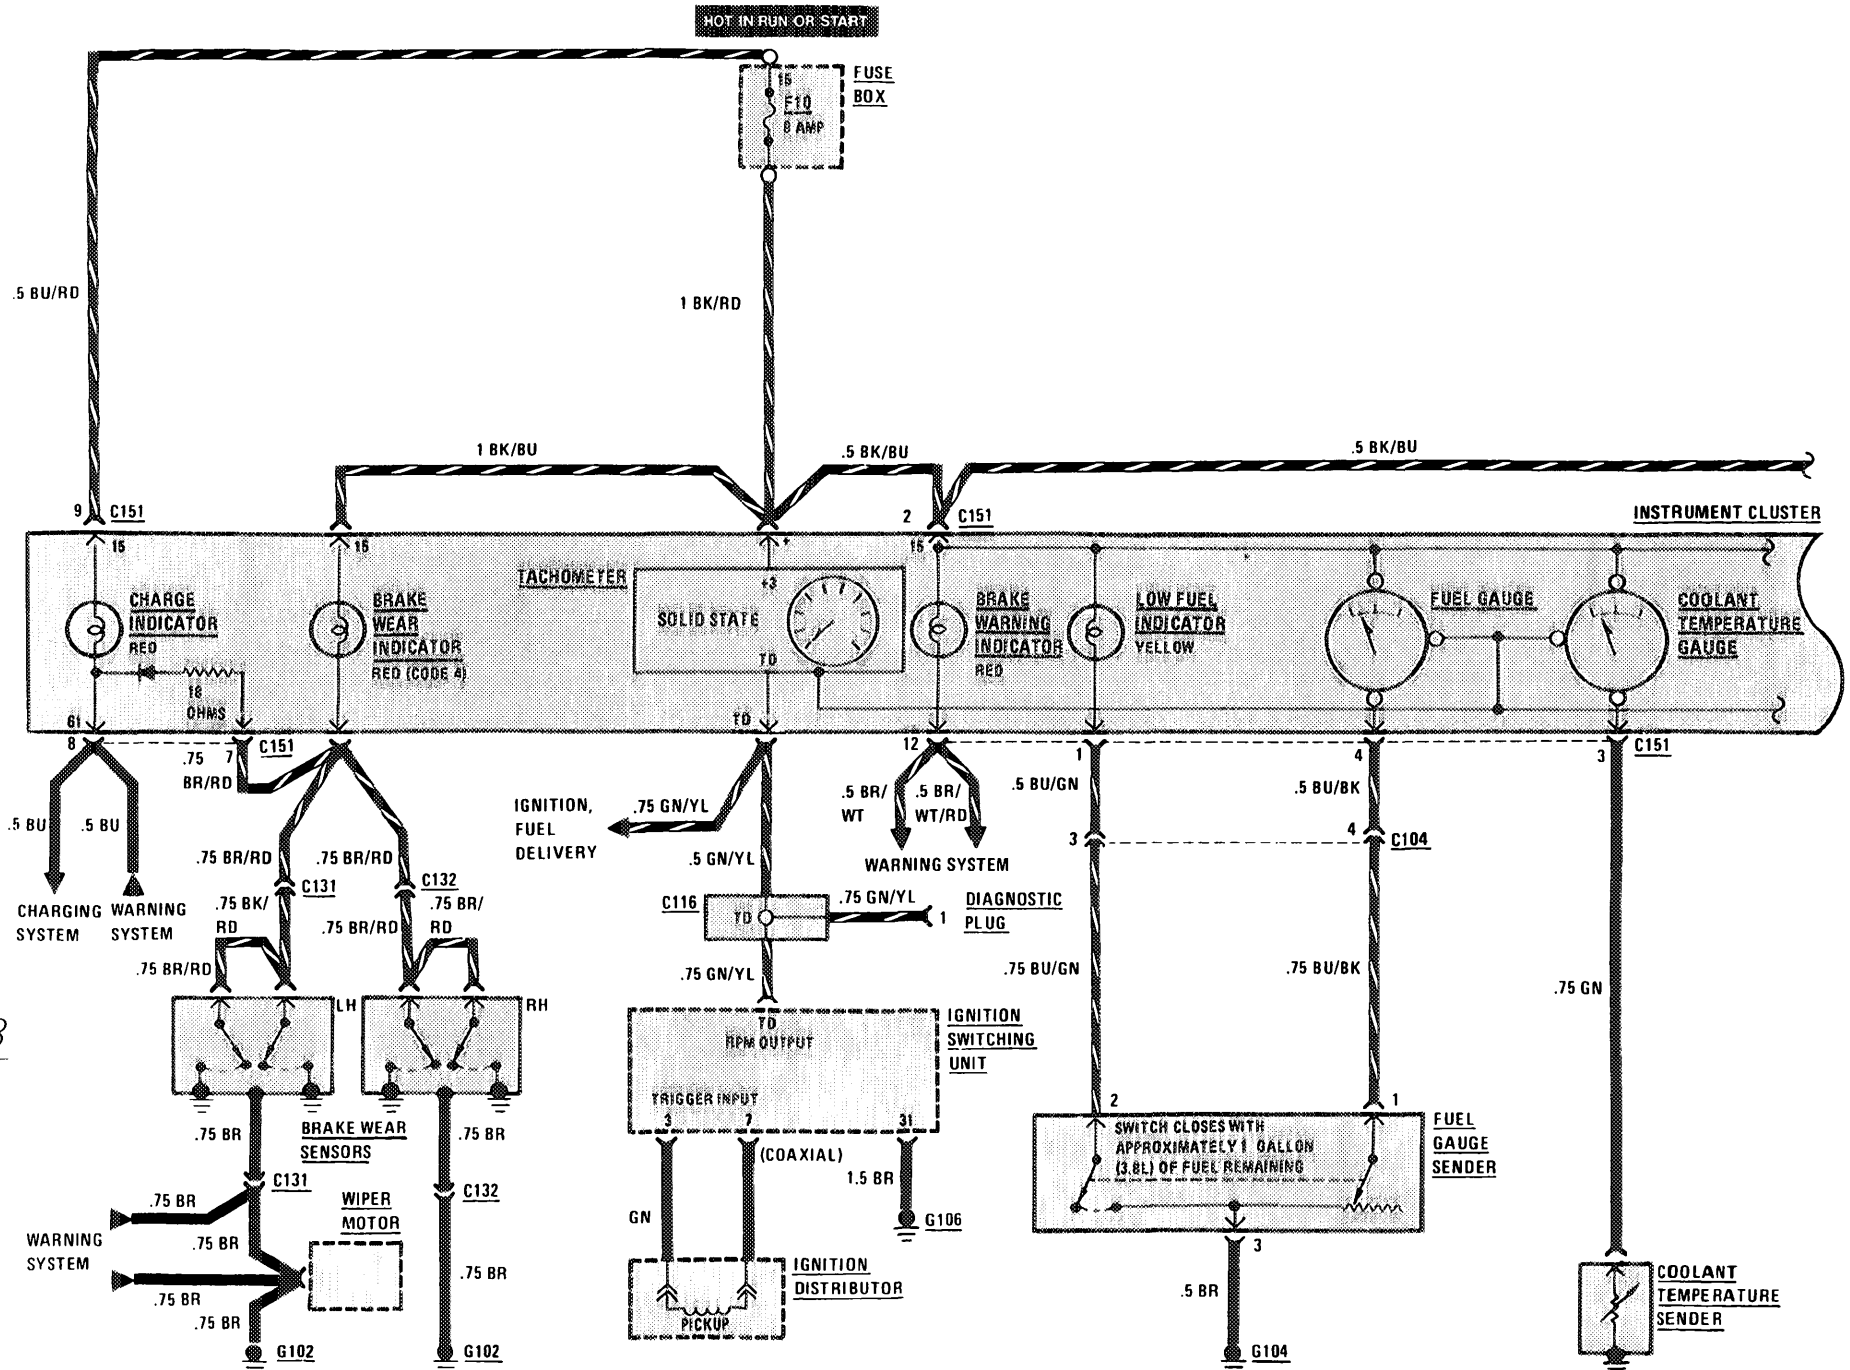



# WARNING INDICATORS/GAUGES/CLOCK


(For Component Locations See Page 207)

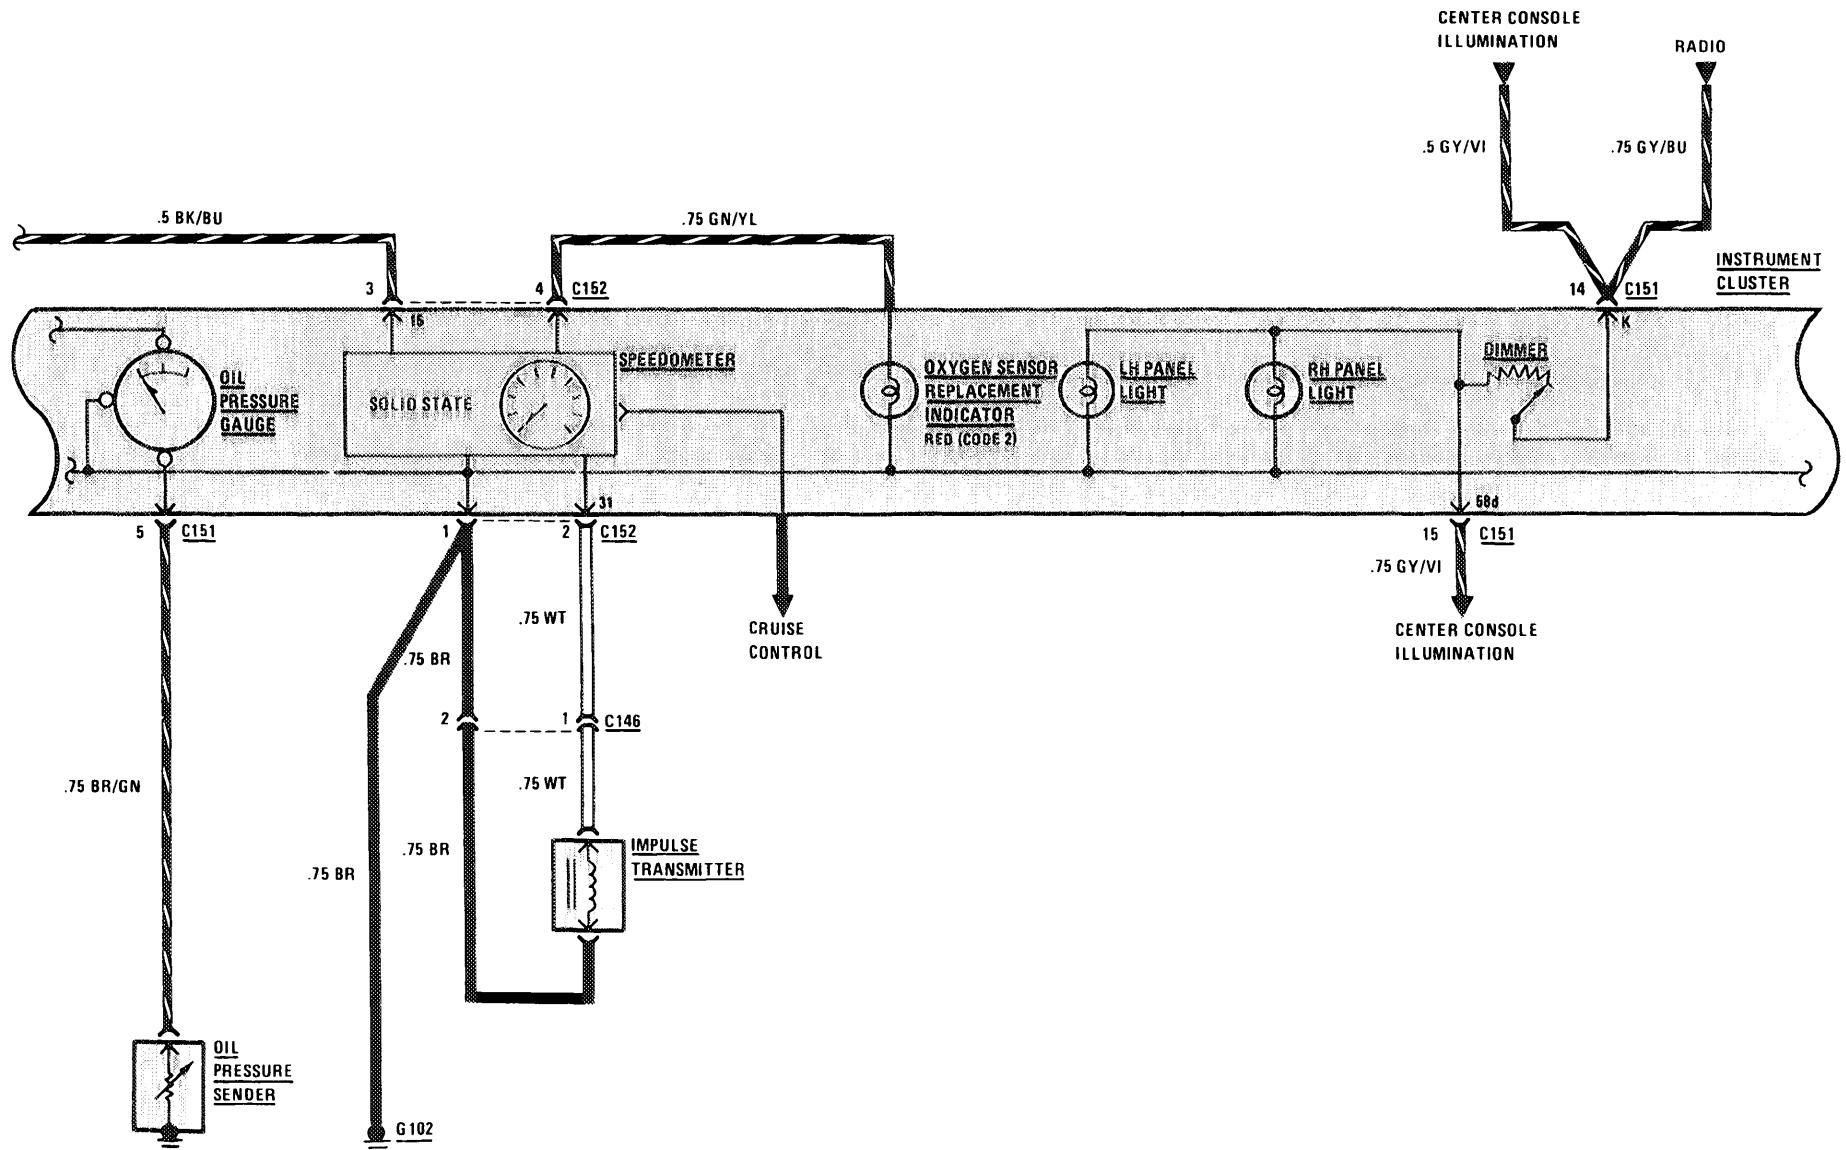



# WARNING INDICATORS/GAUGES/CLOCK

(For Component Locations See Page 207)

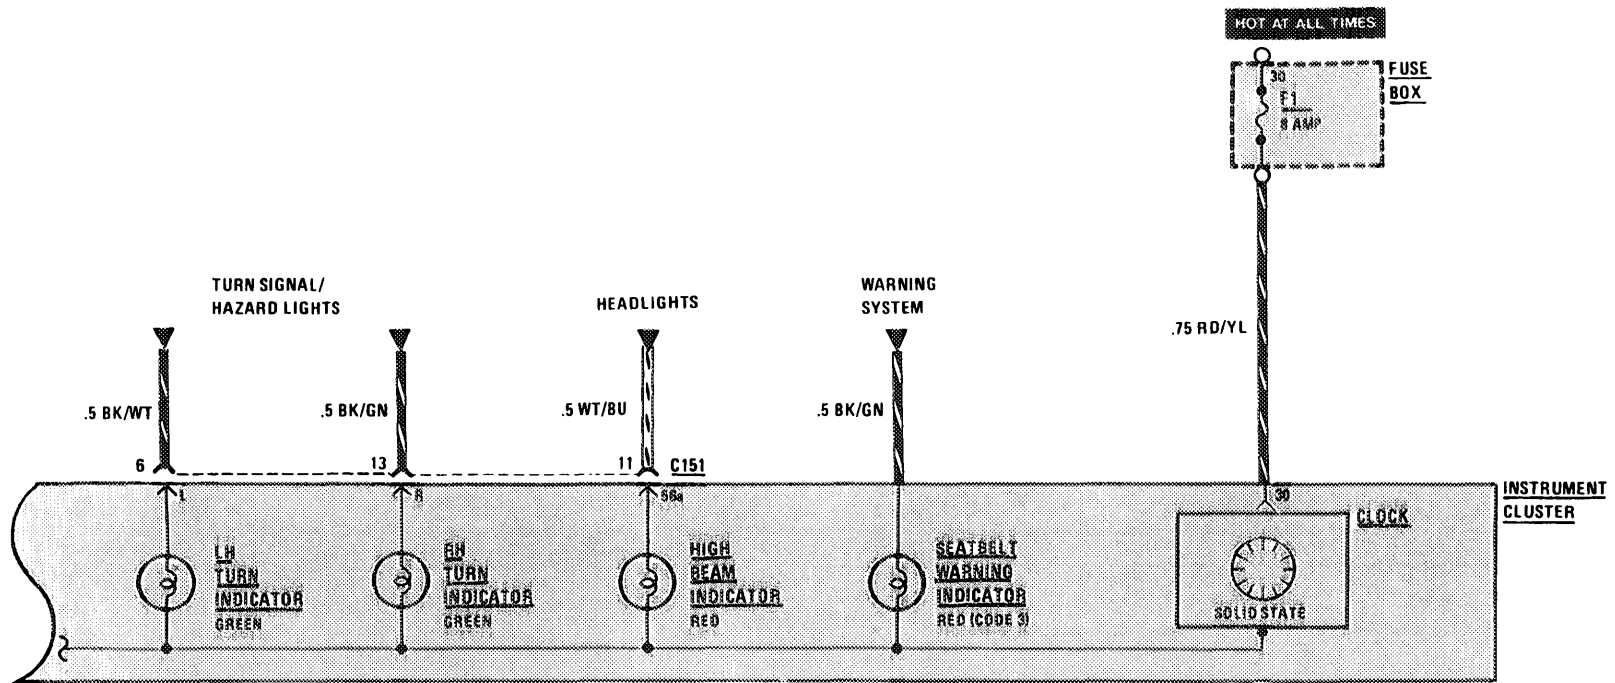

120

380  
SL/SLC




# COURTESY LIGHTS

(For Component Locations See Page 203)

**380 SL**

HOT AT ALL TIMES

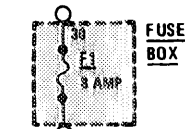

1.5 RD/GY

30  
F1  
30 AMP

DIAGNOSTIC  
PLUG

6

 
 
1.5 RD

C116

1.5 RED


1.5 RD/GY

.75 RD GY



.75 BR/GY/RD

 .75 BR/GY



.75 BR/GY

.75 BR/GY

.75 BR/GY

 
.75 BR/GY



.75 BR

C131

.75 BR



.5 BR

1.5 BR

.75 BR

WARNING SYSTEM


G102

121  
380  
SL/SLC



# COURTESY LIGHTS


(For Component Locations See Page 203)

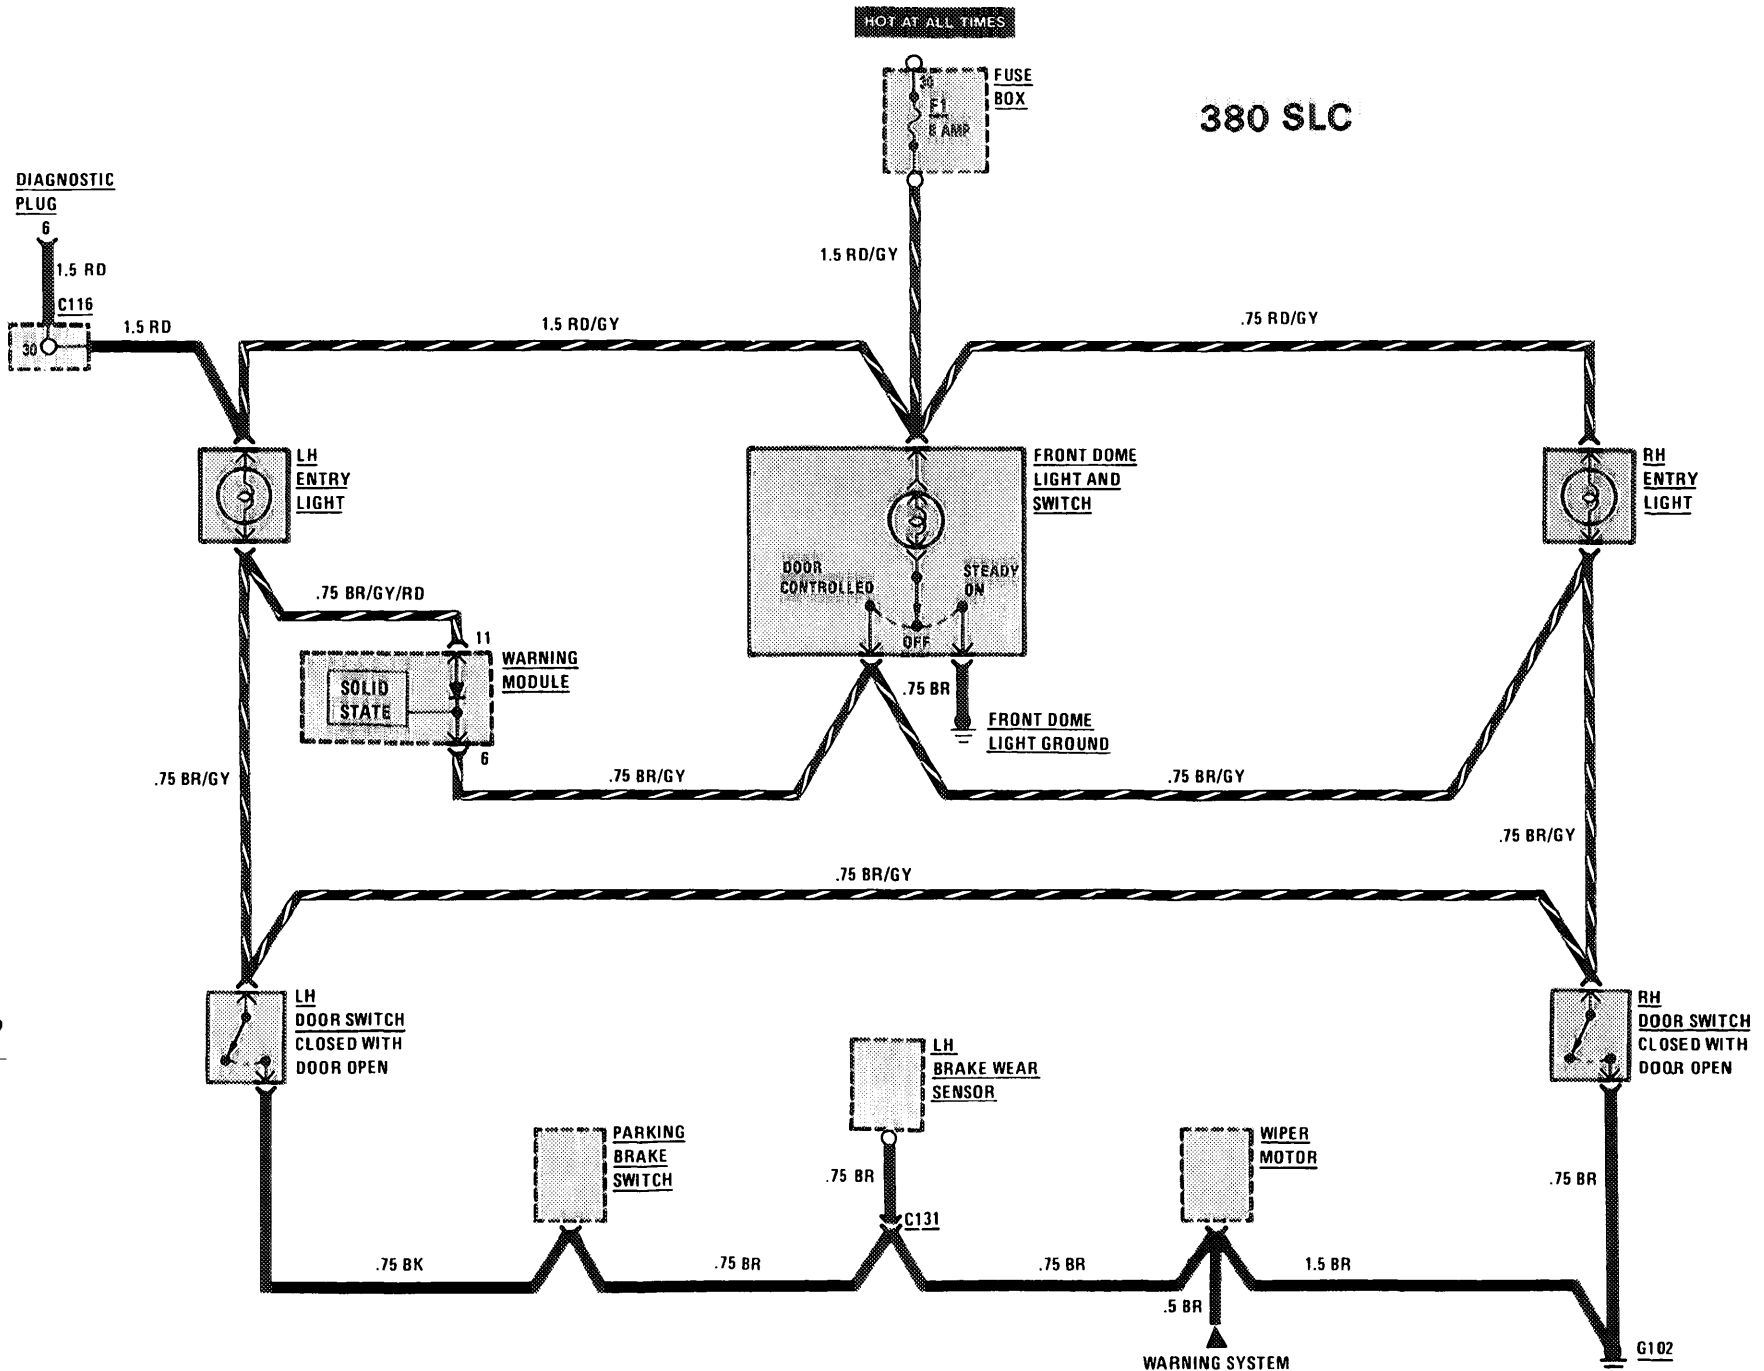




# GLOVE BOX LIGHT/COURTESY LIGHTS

(For Component Locations See Page 203)

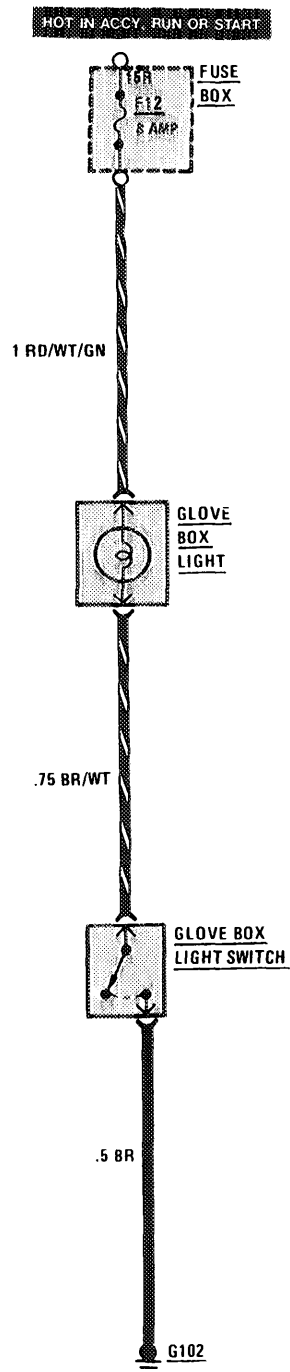

**380 SL/SLC**

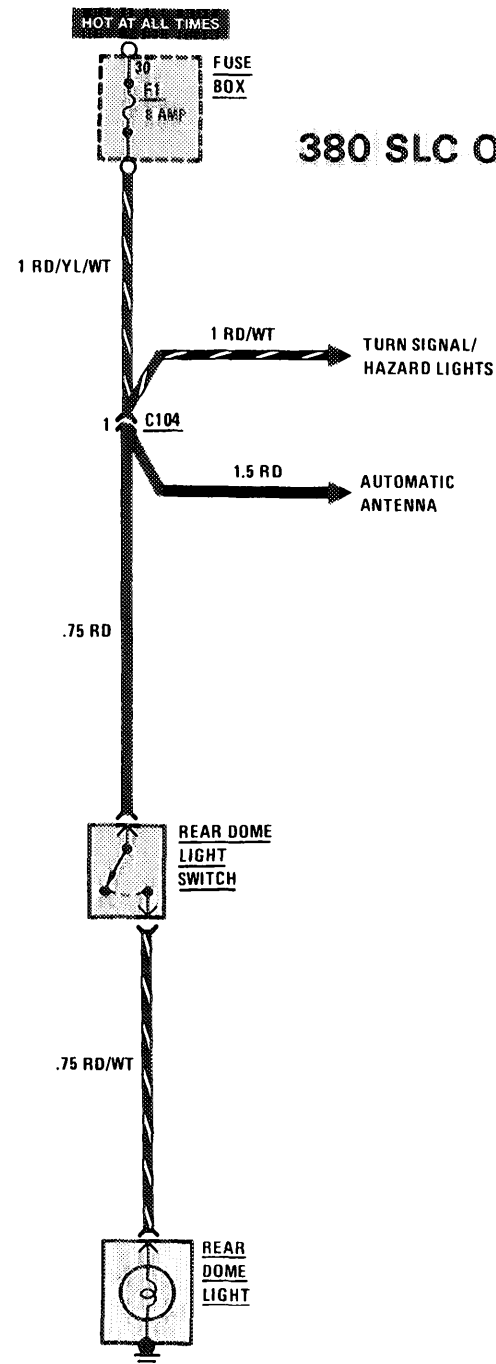


**380 SLC ONLY**



# ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

(For Component Locations See Page 204)

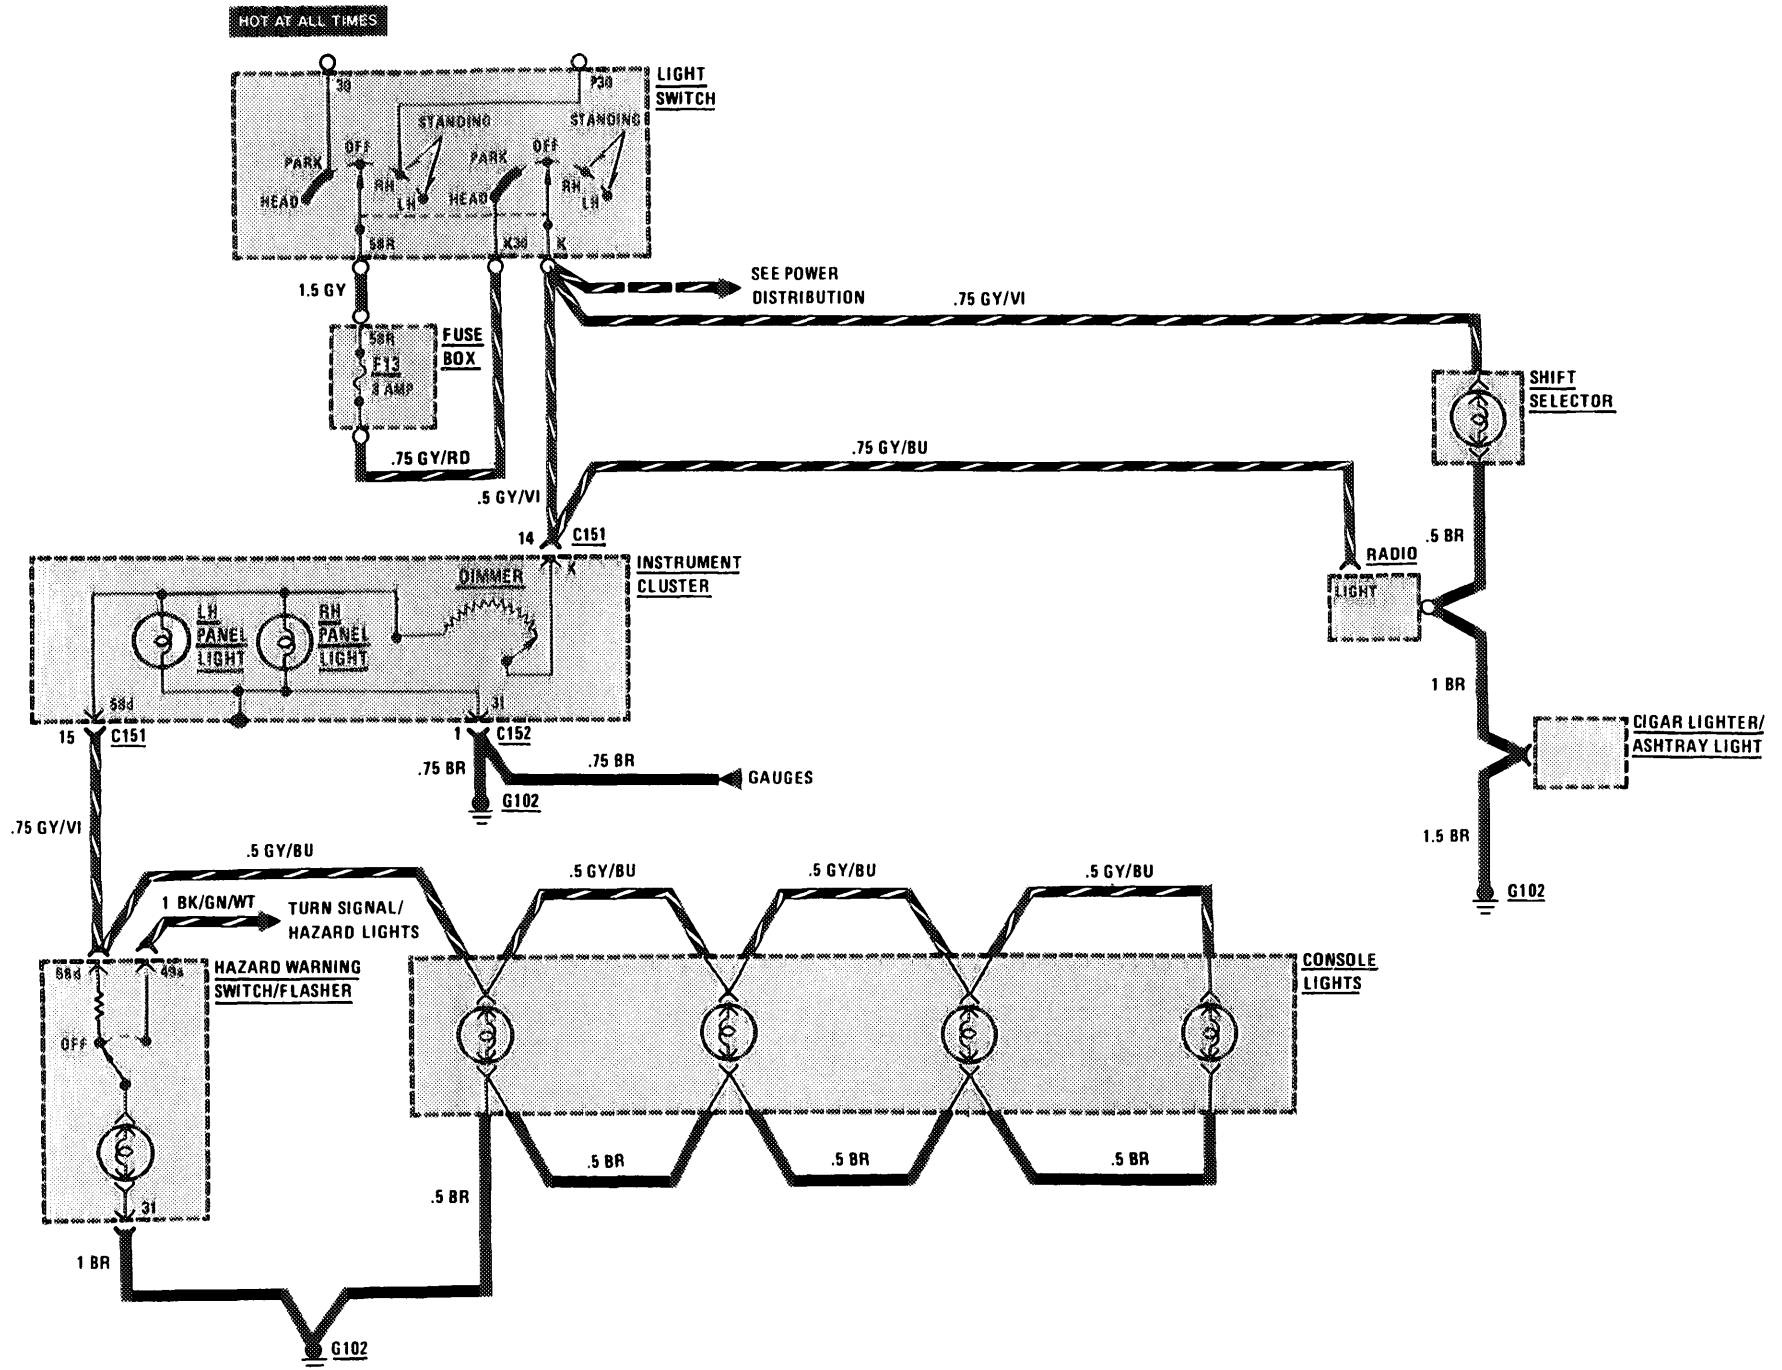








# HORNS / AUXILIARY FAN (For Component Locations See Page 204)

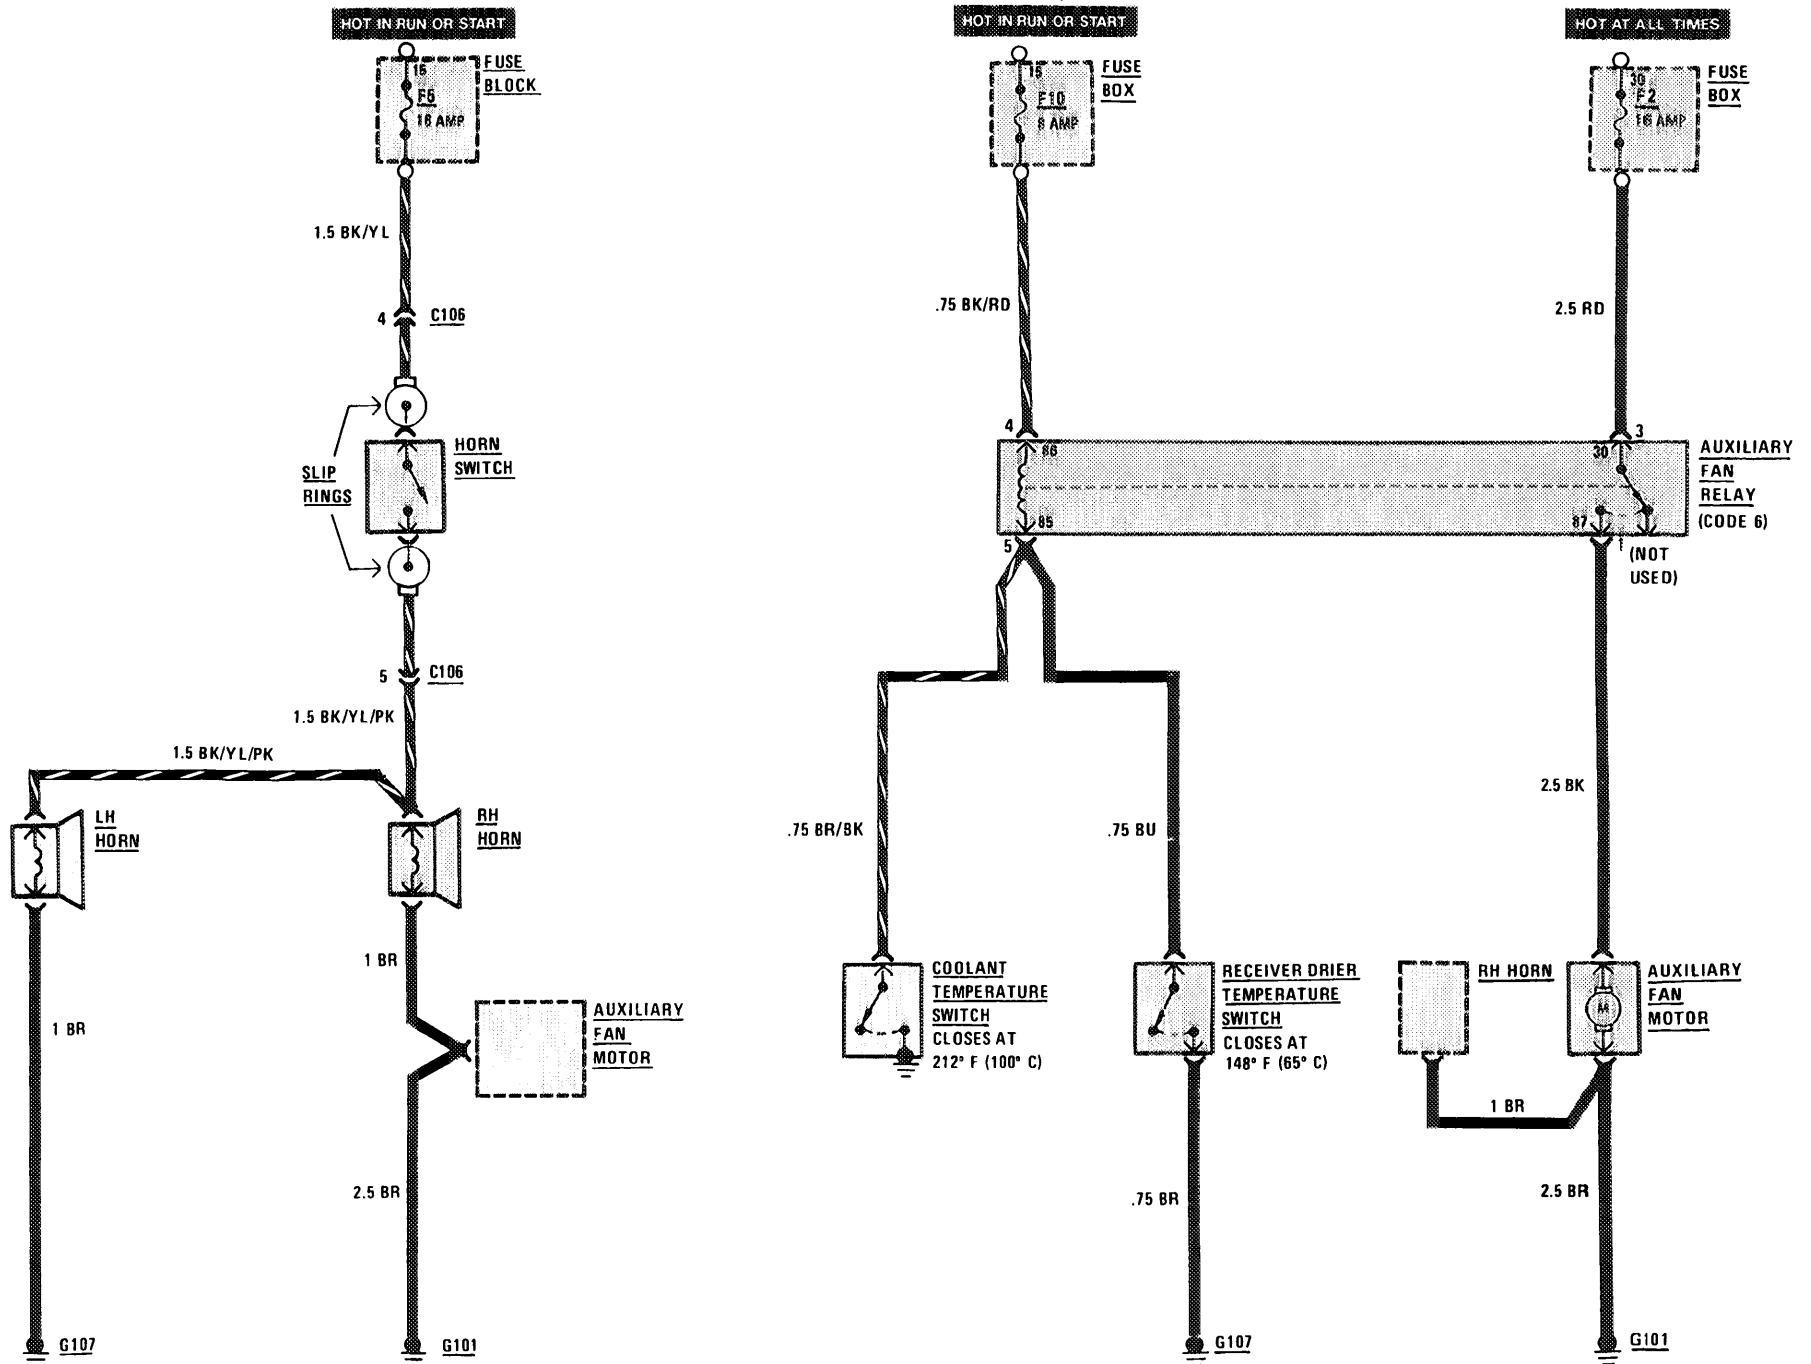




(For Component Locations See Page 328)

**HOT IN RUN OR START**

## HOT AT ALL TIMES


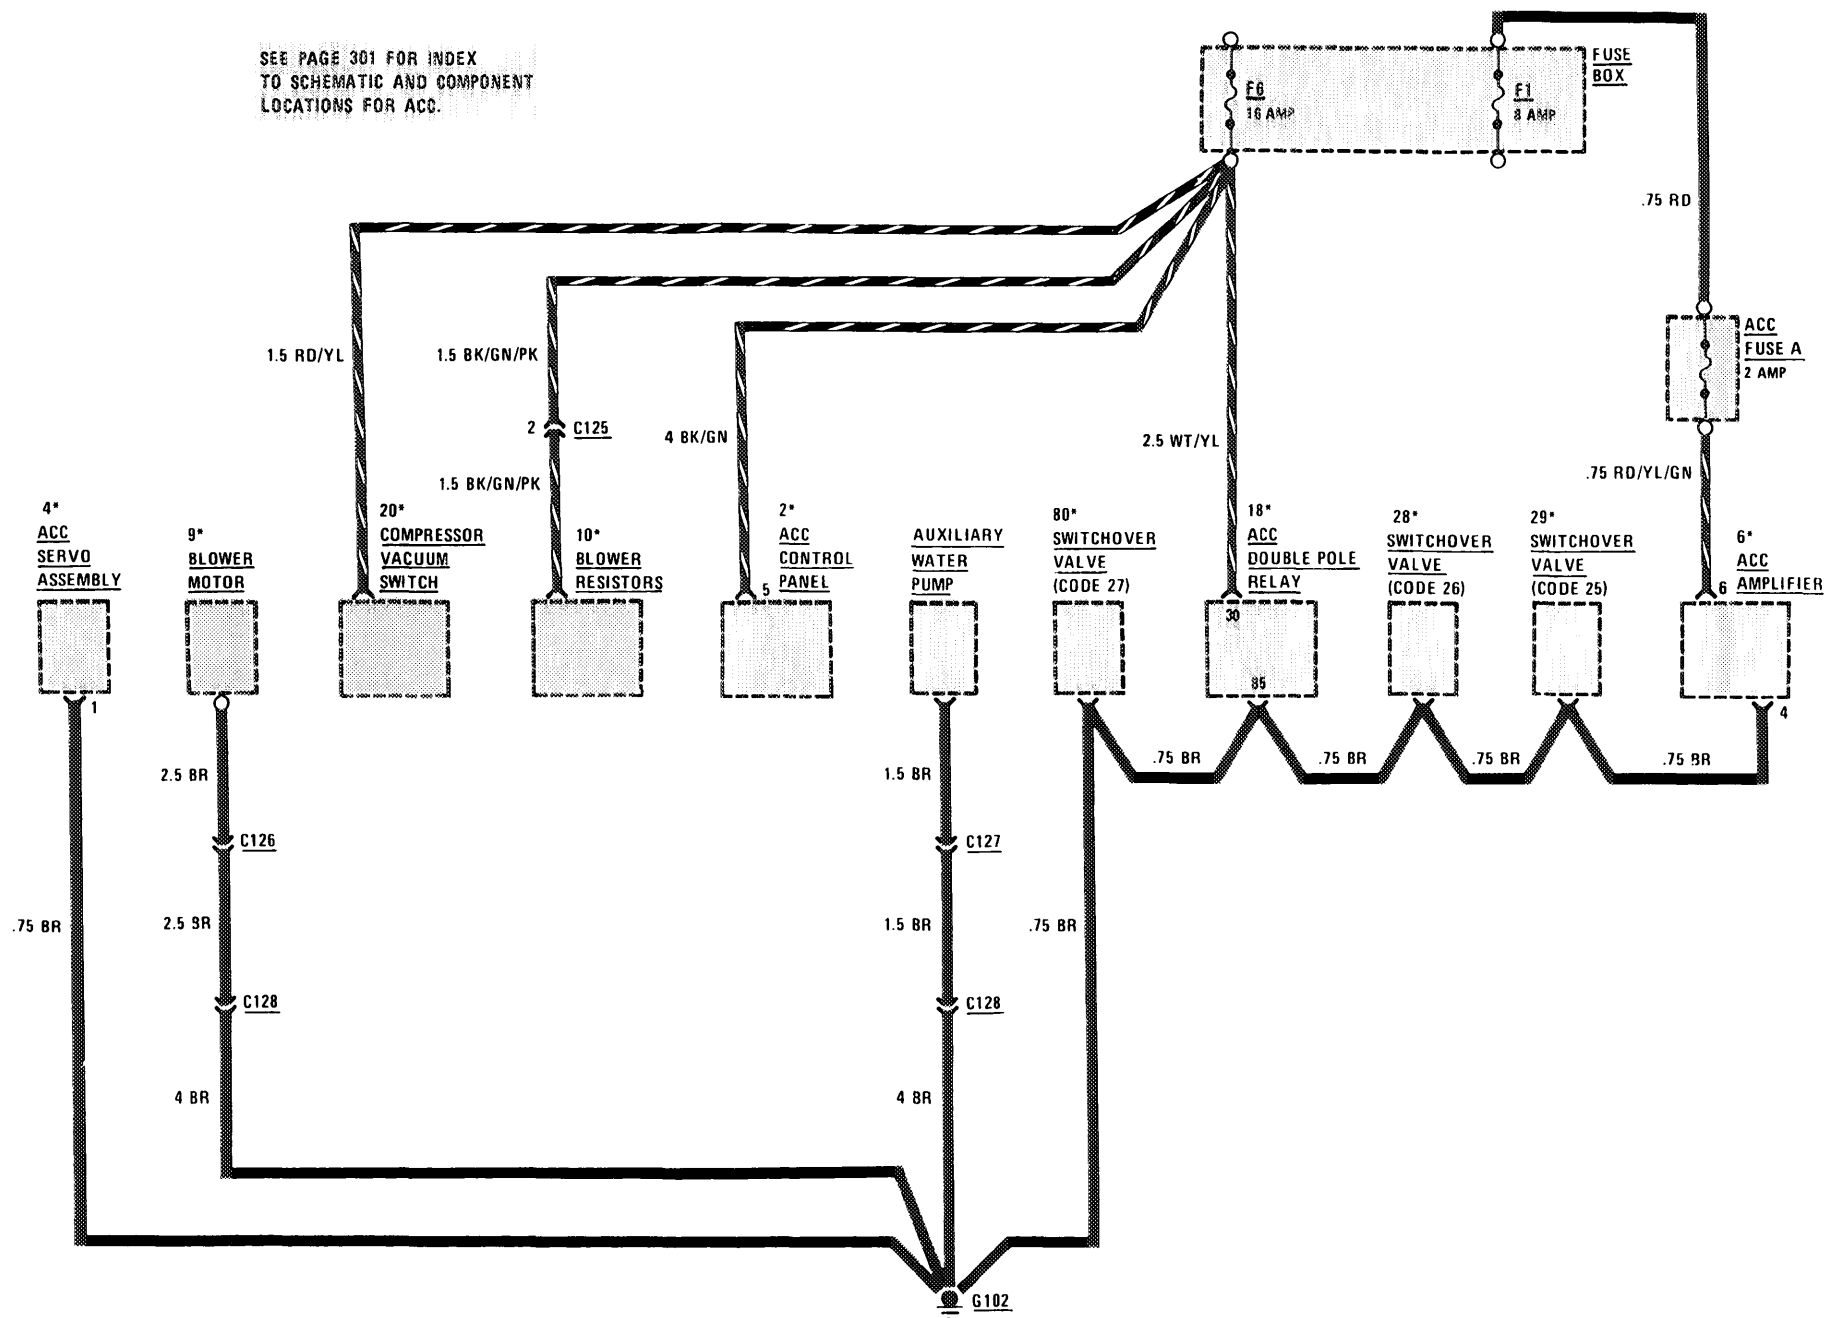




# REAR DEFOGGER/ SLIDING ROOF

(For Component Locations See Page 206)


380 SLC ONLY

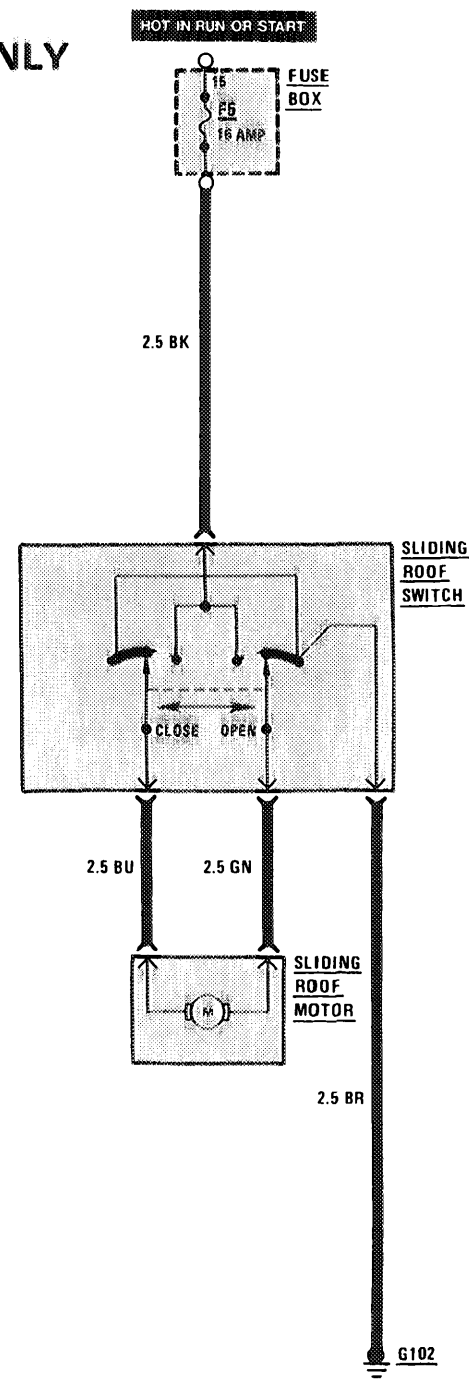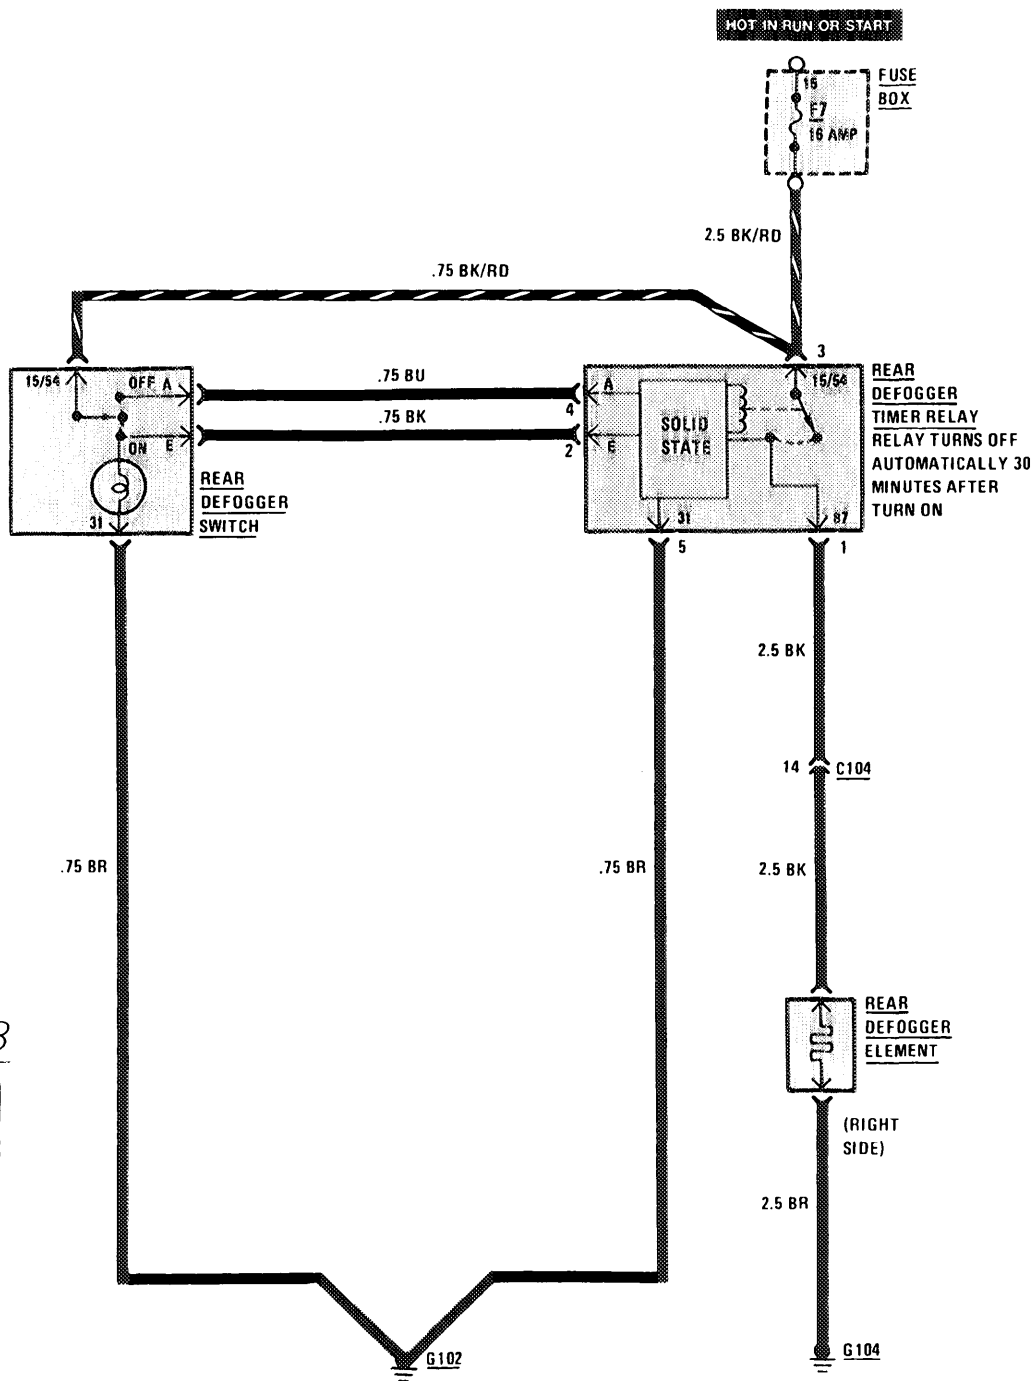



# POWER WINDOWS

(For Component Locations See Page 206)

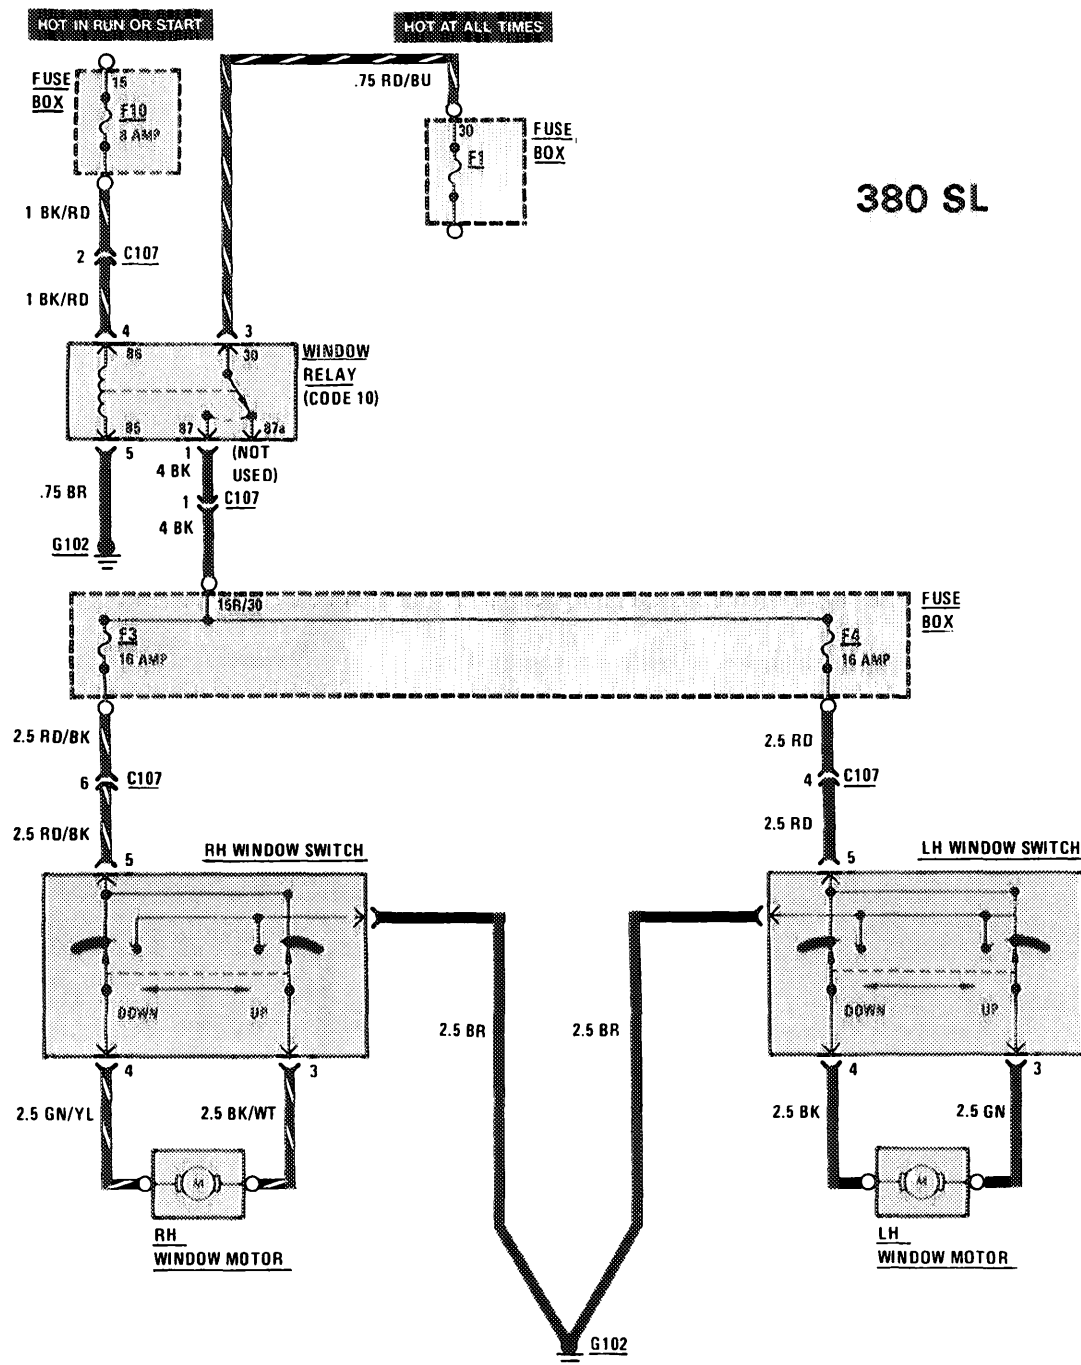




# POWER WINDOWS

(For Component Locations See Page 206)

380 SLC


130  
380  
SL/SLC

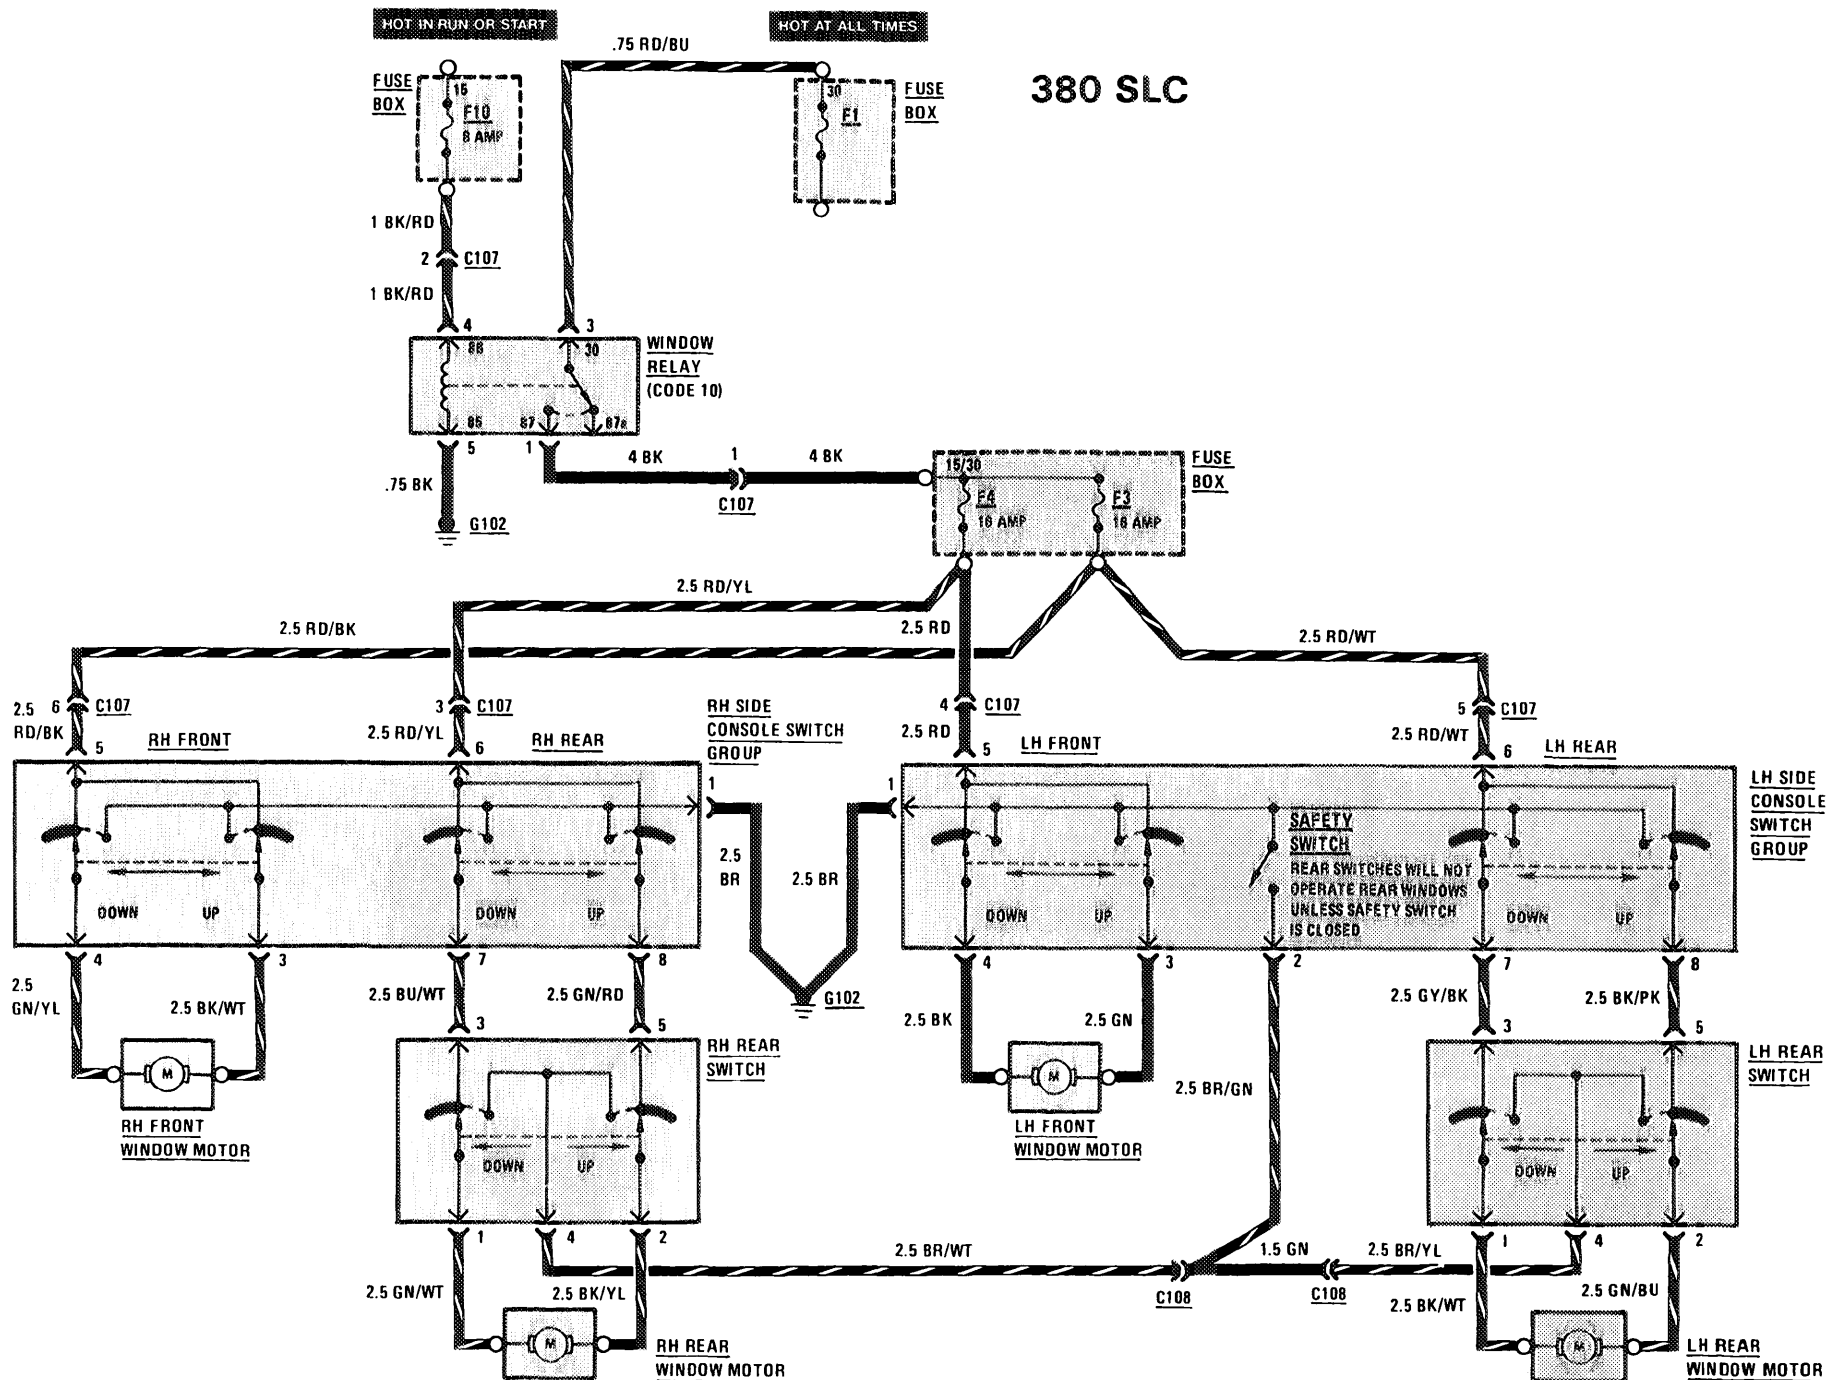



# CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA


(For Component Locations See Page 202)

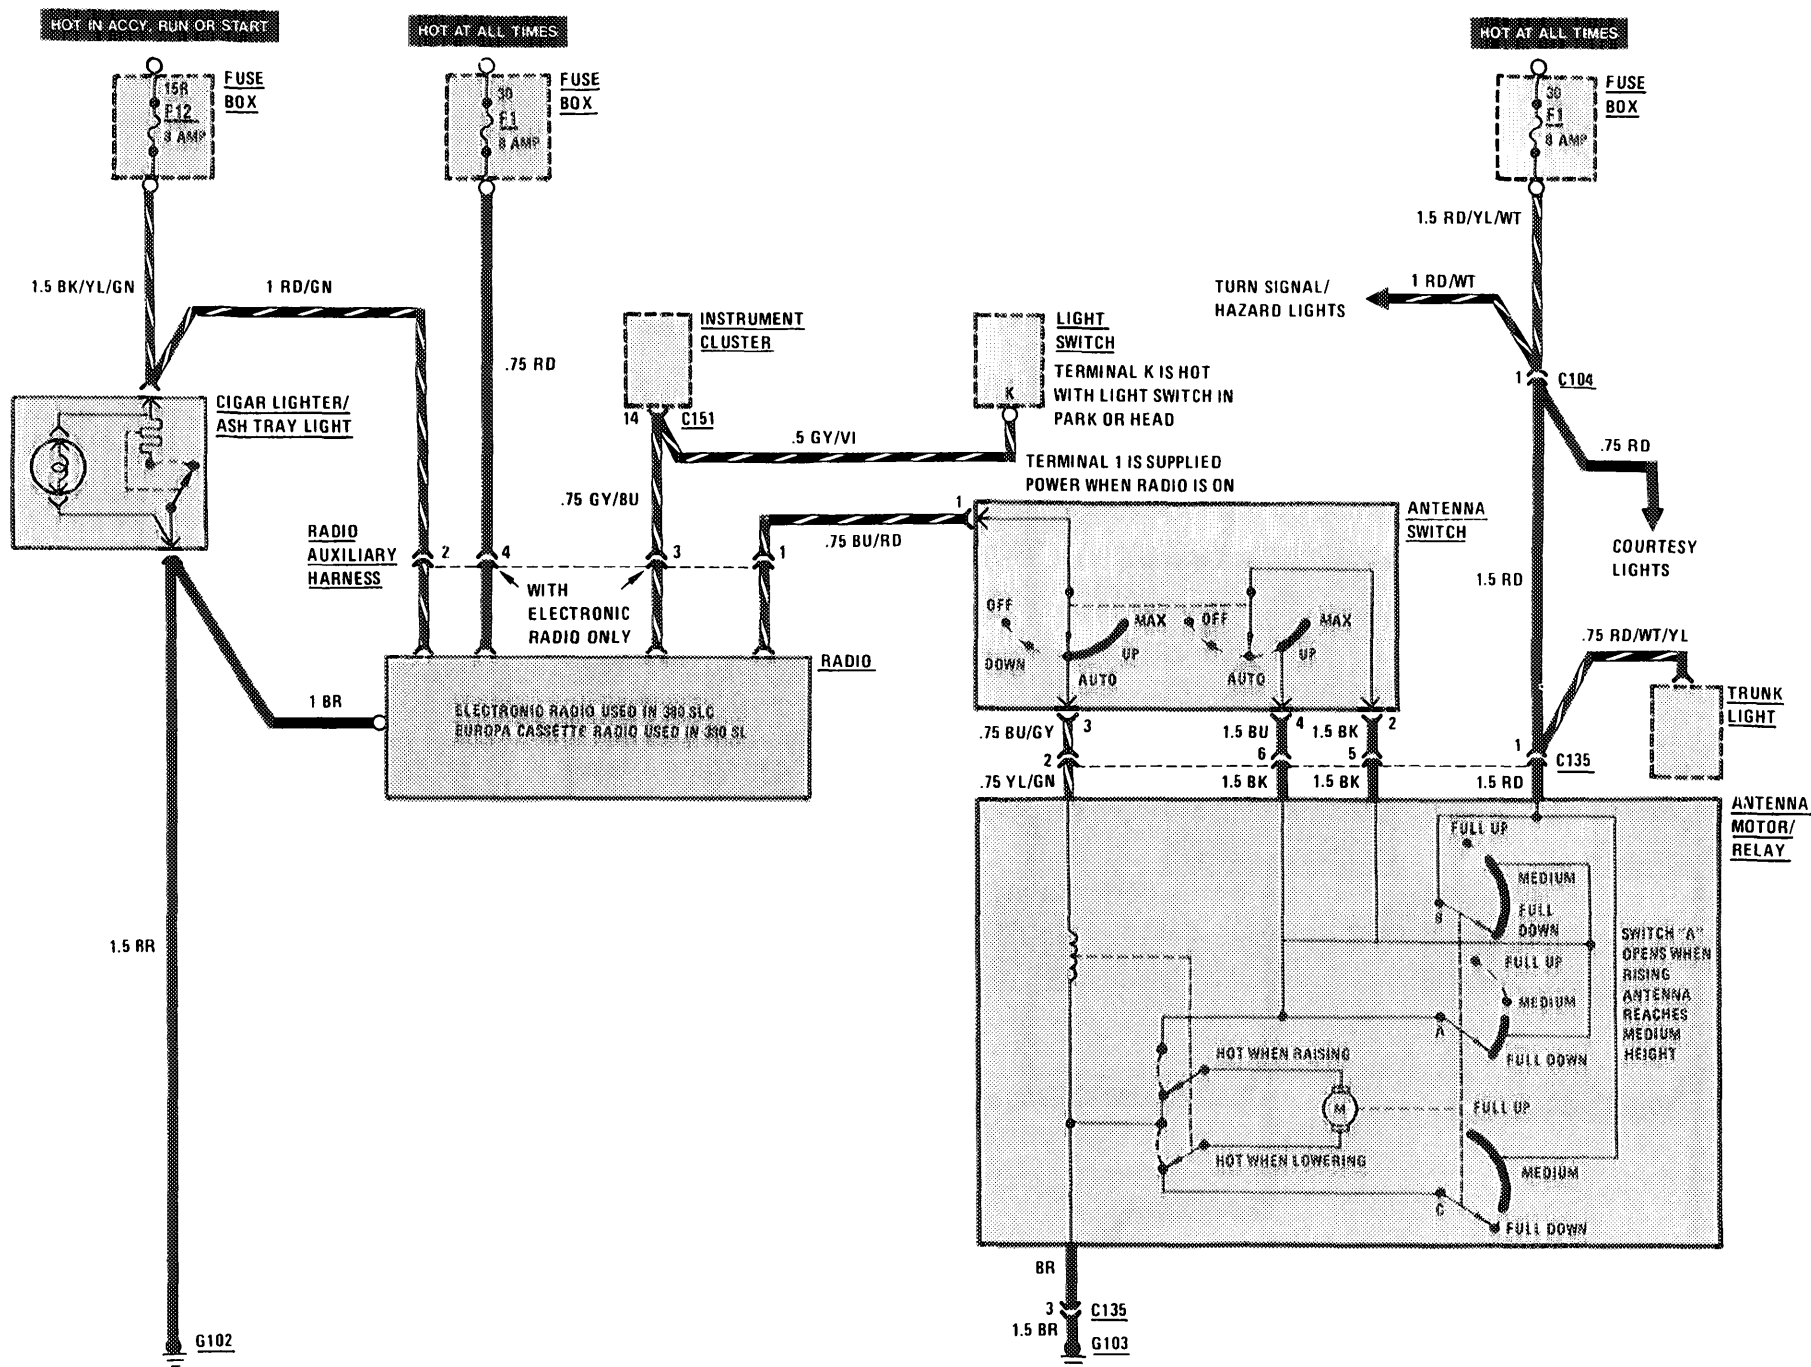





# HEATED SEATS

(For Component Locations See Page 203)

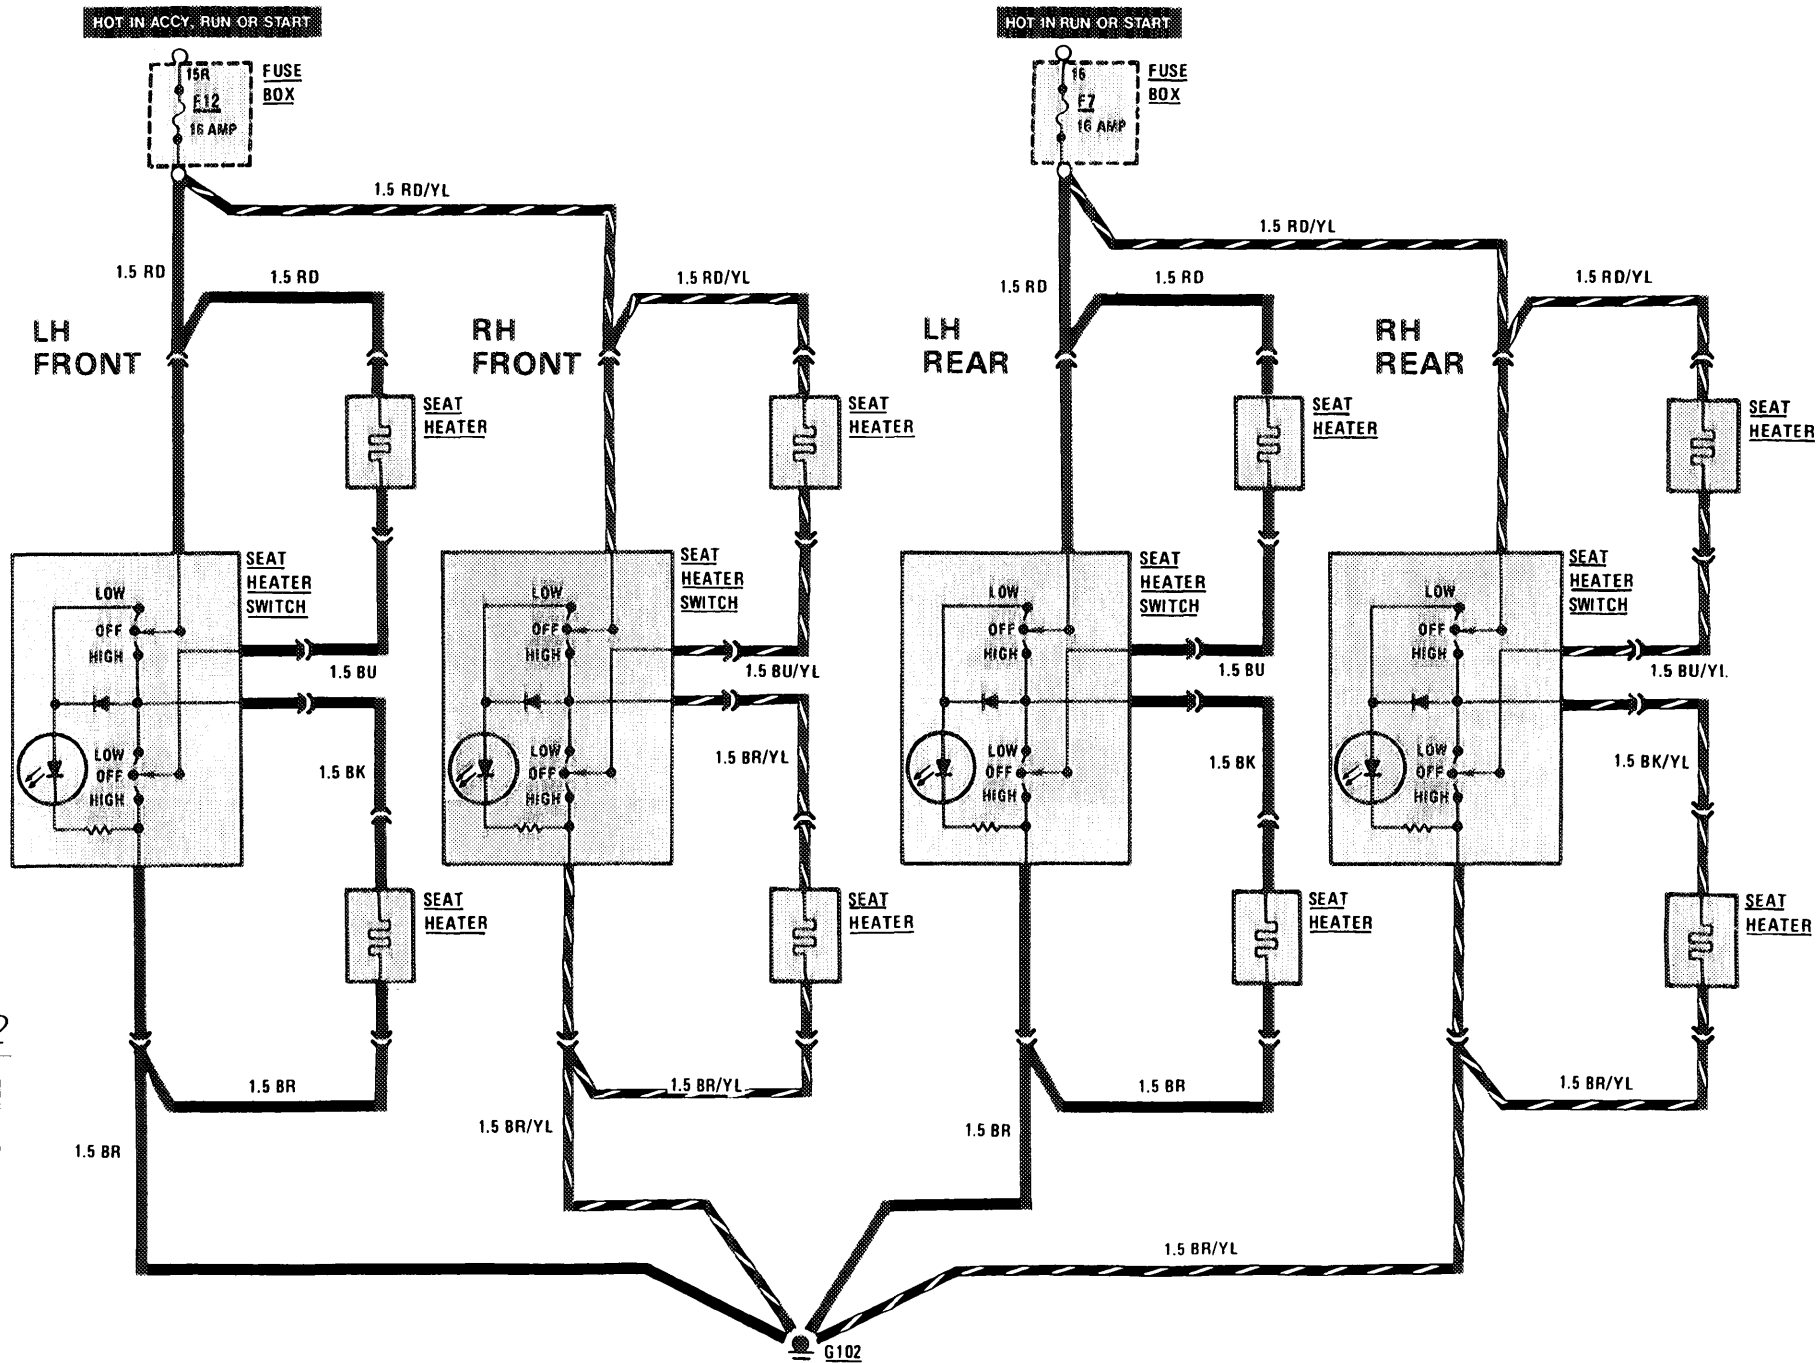




# GROUND DISTRIBUTION

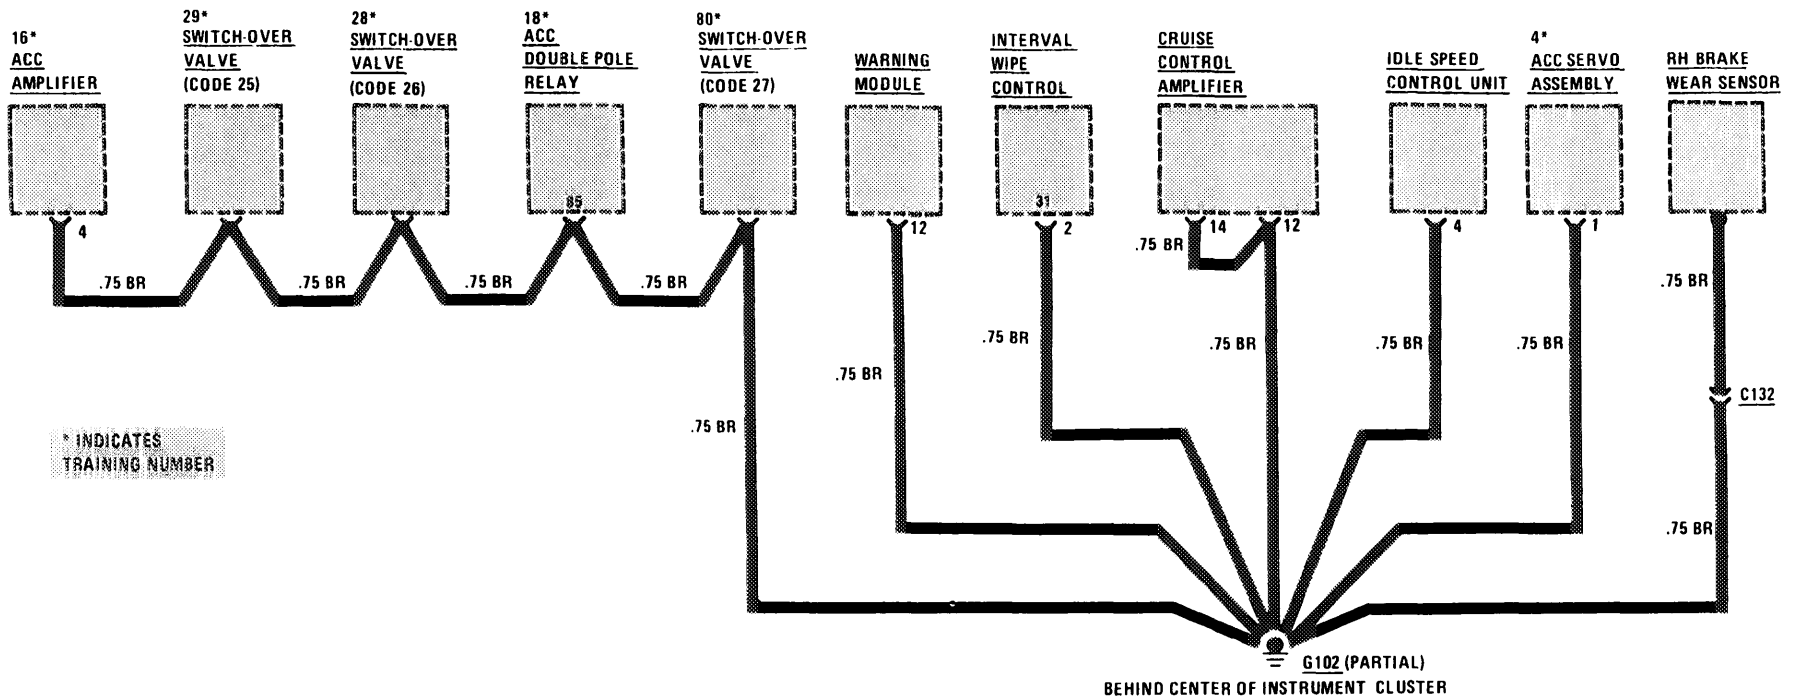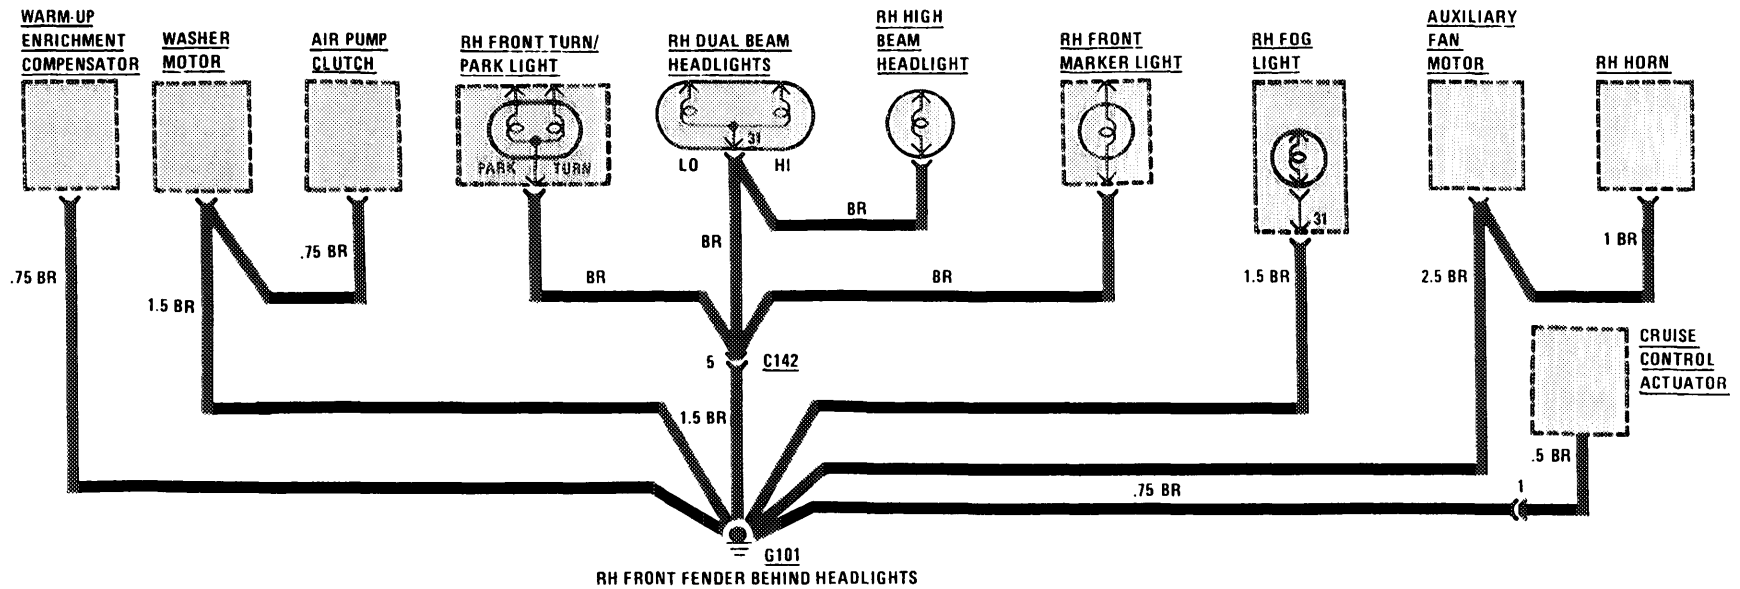

\* INDICATES TRAINING NUMBER



# GROUND DISTRIBUTION

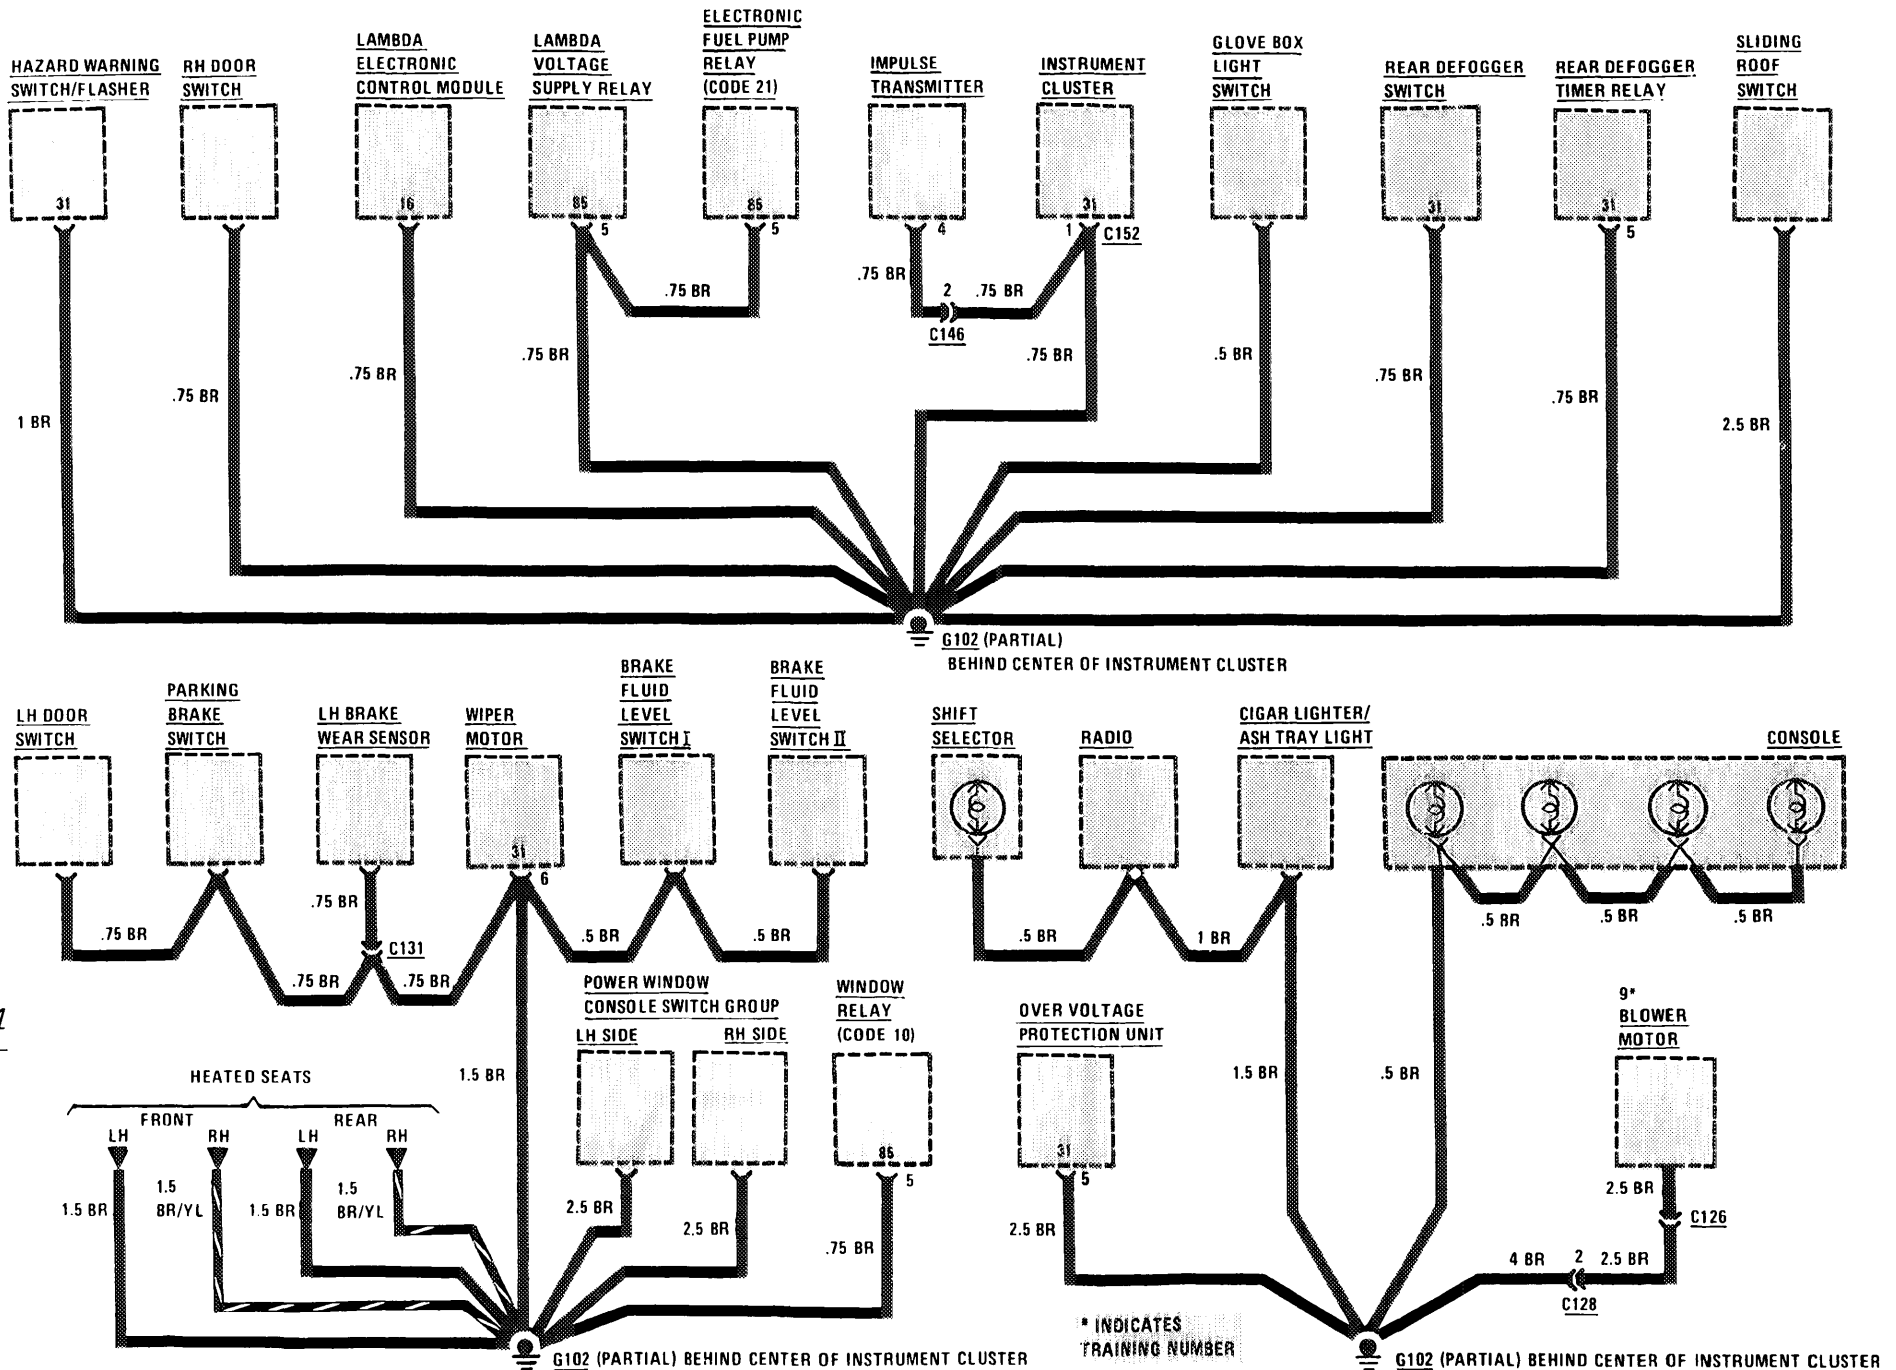



# GROUND DISTRIBUTION

