

INDEX

MODEL	SALES DESIGNATION
107.045	380 SL

CIRCUIT	PAGE	CIRCUIT	PAGE
Air Injection Management	109	Lights (continued)	
Anti Lock Brake System	132	—Glove Box	111
Automatic Antenna	127	—Hazard	116
Automatic Climate Control	141	—Headlights	112
Auxiliary Fan	123	—Instrument Cluster	122
Charging System	110	—License	115
Cigar Lighter	127	—Marker	115
Clock	120	—Park	114
Cold Start	106	—Stop	112/2
Component Locations	201	—Tail	114
Cruise Control	112/2	—Trunk	115
Diagnostic Socket	107, 108	—Turn Signal	116
Fuel Delivery	107	—Vanity	121/1
Fuse Box	103	Outside Heated Mirrors	130
Fuse-Circuit List	102	Power Distribution	104
Gauges	118	Power Distribution—ACC	141
Ground Distribution	138	Power Windows	126
Ground Distribution — ACC	141	Radio	127
Heated Seats	128	Rear Defogger	125
Horns	123	RH Outside Mirror	129
Idle Speed Stabilization	109	Start	106
Ignition	107	Supplemental Restraint System	131
Lambda Control	108	Tachometer	118
Lights		Transmission Kickdown	107
—Backup	111	Warning Indicators	118
—Center Console	122	Warning System	117
—Courtesy	121	Wiper/Washer	124
—Fog Lights	112		

REVISIONS:

FUSE-CIRCUIT LIST

MY 1983 - MY 1985

380 SL


Fuse		Circuits Protected	Connection to Circuit	Page
No.	Amps (Color)			
1	8 (WT)	Cigar Lighter/Radio	15R	127
	16 (PK) ①	Glove Box Lamp		111
		Heated Seats		128
		RH Outside Mirror		129
2	16 (PK)	Headlamps	15R	112
		Wiper/Washer		124
3	16 (PK)	Power Windows (RH)	15	126
4	16 (PK)	Power Windows (LH)	15	126
5	8 (WT)	Anti-Lock Brake System	15	132
		Power Windows		126
		Stop Lamps/Cruise Control		112/2
		Turn Signal/Hazard Lamps		116
		Warning Indicators		118
		Warning System		117
6	25 (BU)	Automatic Climate Control	15X	141
7	8 (WT)	Air Injection Management	15	109
		Automatic Climate Control		141
		Auxiliary Fan		123
		Backup Lamps		111
		Transmission Kickdown		107
		Warning Indicators		120
8	8 (WT) ②	Horns	15	123
		Outside Heated Mirrors		130
9		Not Used		
10	16 (PK)	Rear Defogger	15	125

Fuse		Circuits Protected	Connection to Circuit	Page
No.	Amps (Color)			
11	8 (WT)	Not Used		
12	8 (WT)	Automatic Antenna	30	127
		Clock		120
		Courtesy Lamps		121
		Diagnostic Socket		107
		Radio		127
		Trunk Lamp		115
		Turn Signal/Hazard Lamps		116
		Warning System		117
13	8 (WT)	Illumination: Instrument	58R	122
		Cluster/Center Console		115
		Lamps: Marker/License		114
		Lamps: Park/Tail (RH)		117
14	16 (PK)	Auxiliary Fan	30	123
15	8 (WT)	Not Used		
16	8 (WT)	Lamps: Park/Tail (LH)	58L	114
17	8 (WT)	Headlamps (RH High Beam & Indicator)	56a	112
18	8 (WT)	Headlamps (LH High Beams)	56a	112
19	16 (PK)	Headlamps (RH Low Beam)/ Fog Lamps	56b	112
20	8 (WT)	Headlamps (LH Low Beam)	56b	112

REVISIONS:

① WITH HEATED SEATS

② 16 AMP (AS OF MODEL YEAR 1985)

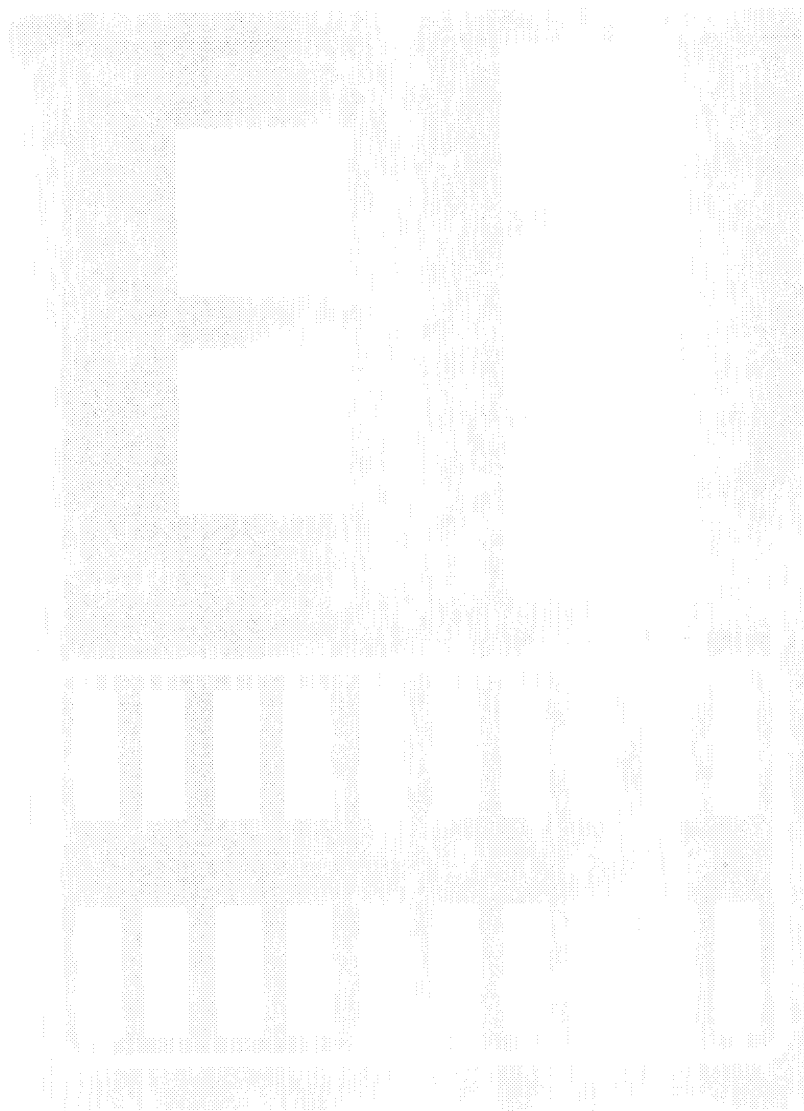FUSE BOX**MY 1983/MY 1984/MY 1985
380SL**

RELAY CODE	RELAY USE
12	Compressor Time Delay Relay
32	Air Injection Management Relay
No Code	Over voltage Protection Relay
6	Auxiliary Fan Relay
10	Window Relay

NOTE: Relays are shown in their typical position. They can be arranged in different positions. Use codes to determine proper relay.

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:



MY 1983 / MY 1984 / MY 1985
380 SL

(For Component Locations See Page 209)

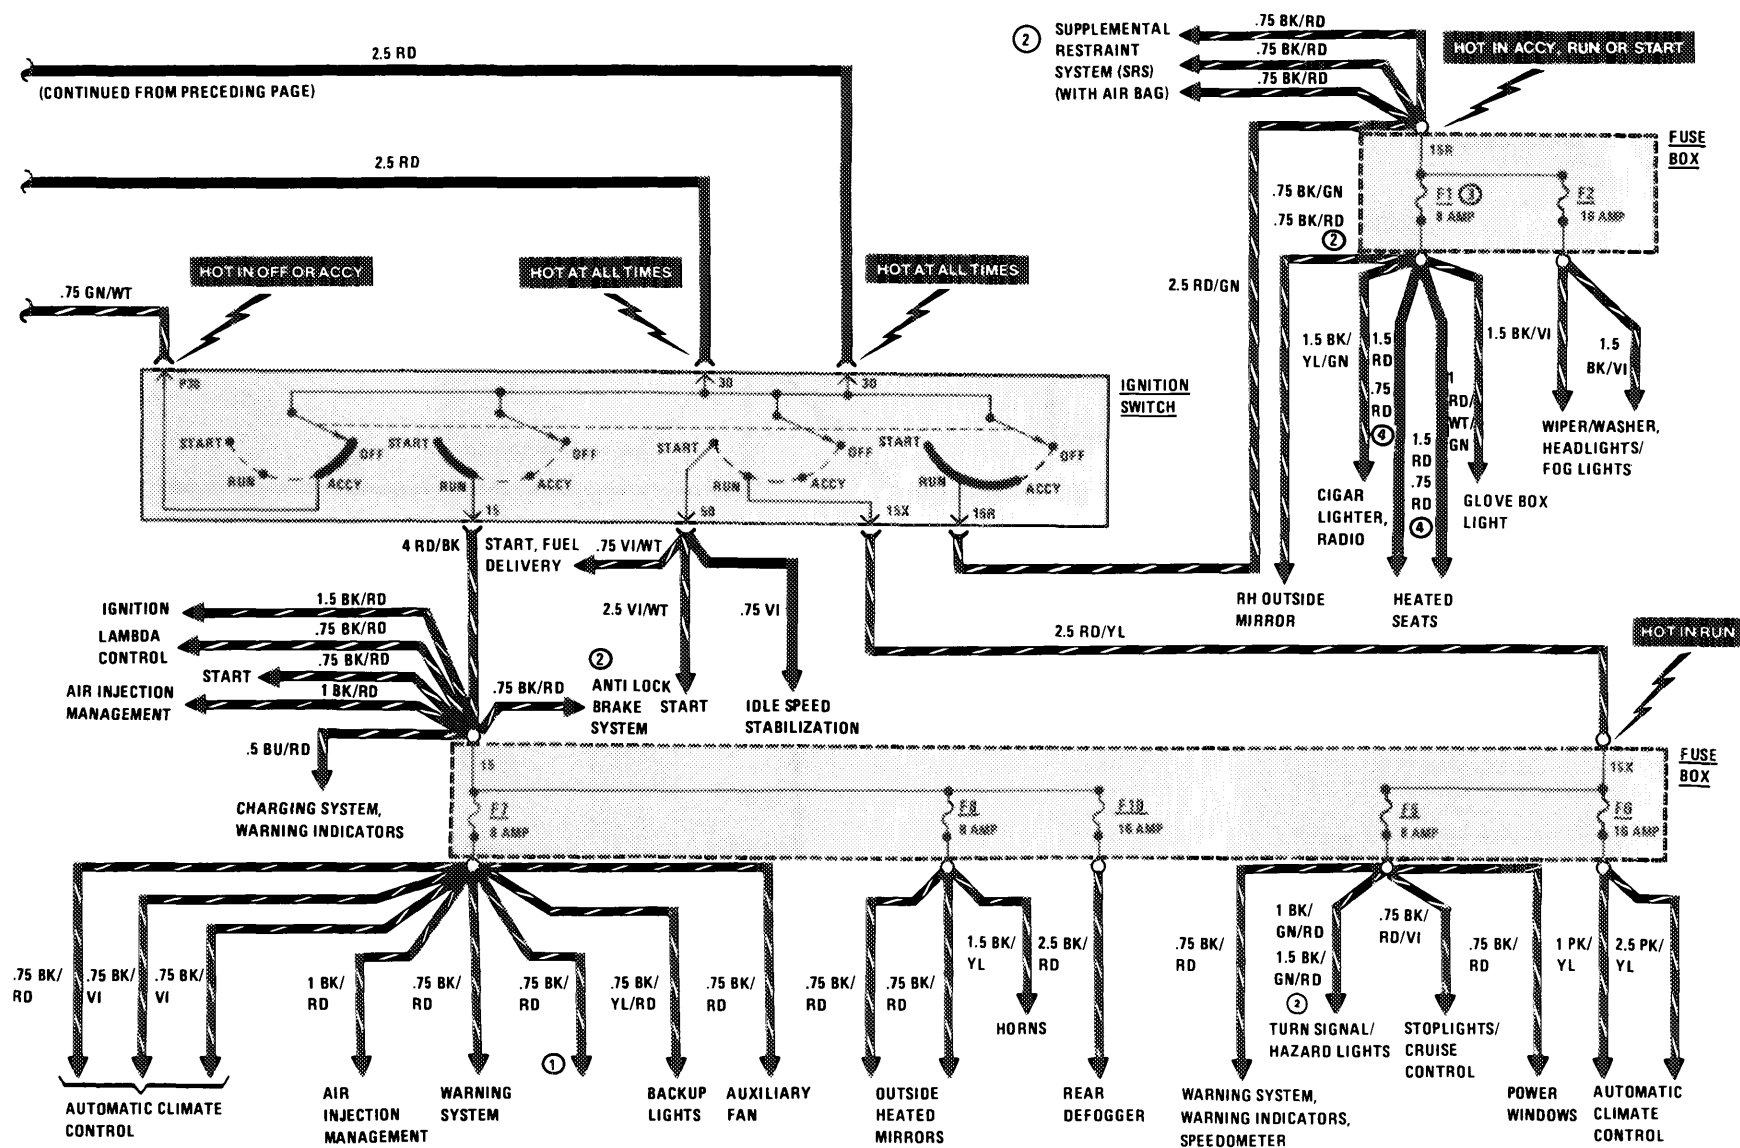


④ MODEL YEARS 1984 AND 1985

START/COLD START

(For Component Locations See Page 210)

MY 1983/MY 1984/MY 1985


380 SL

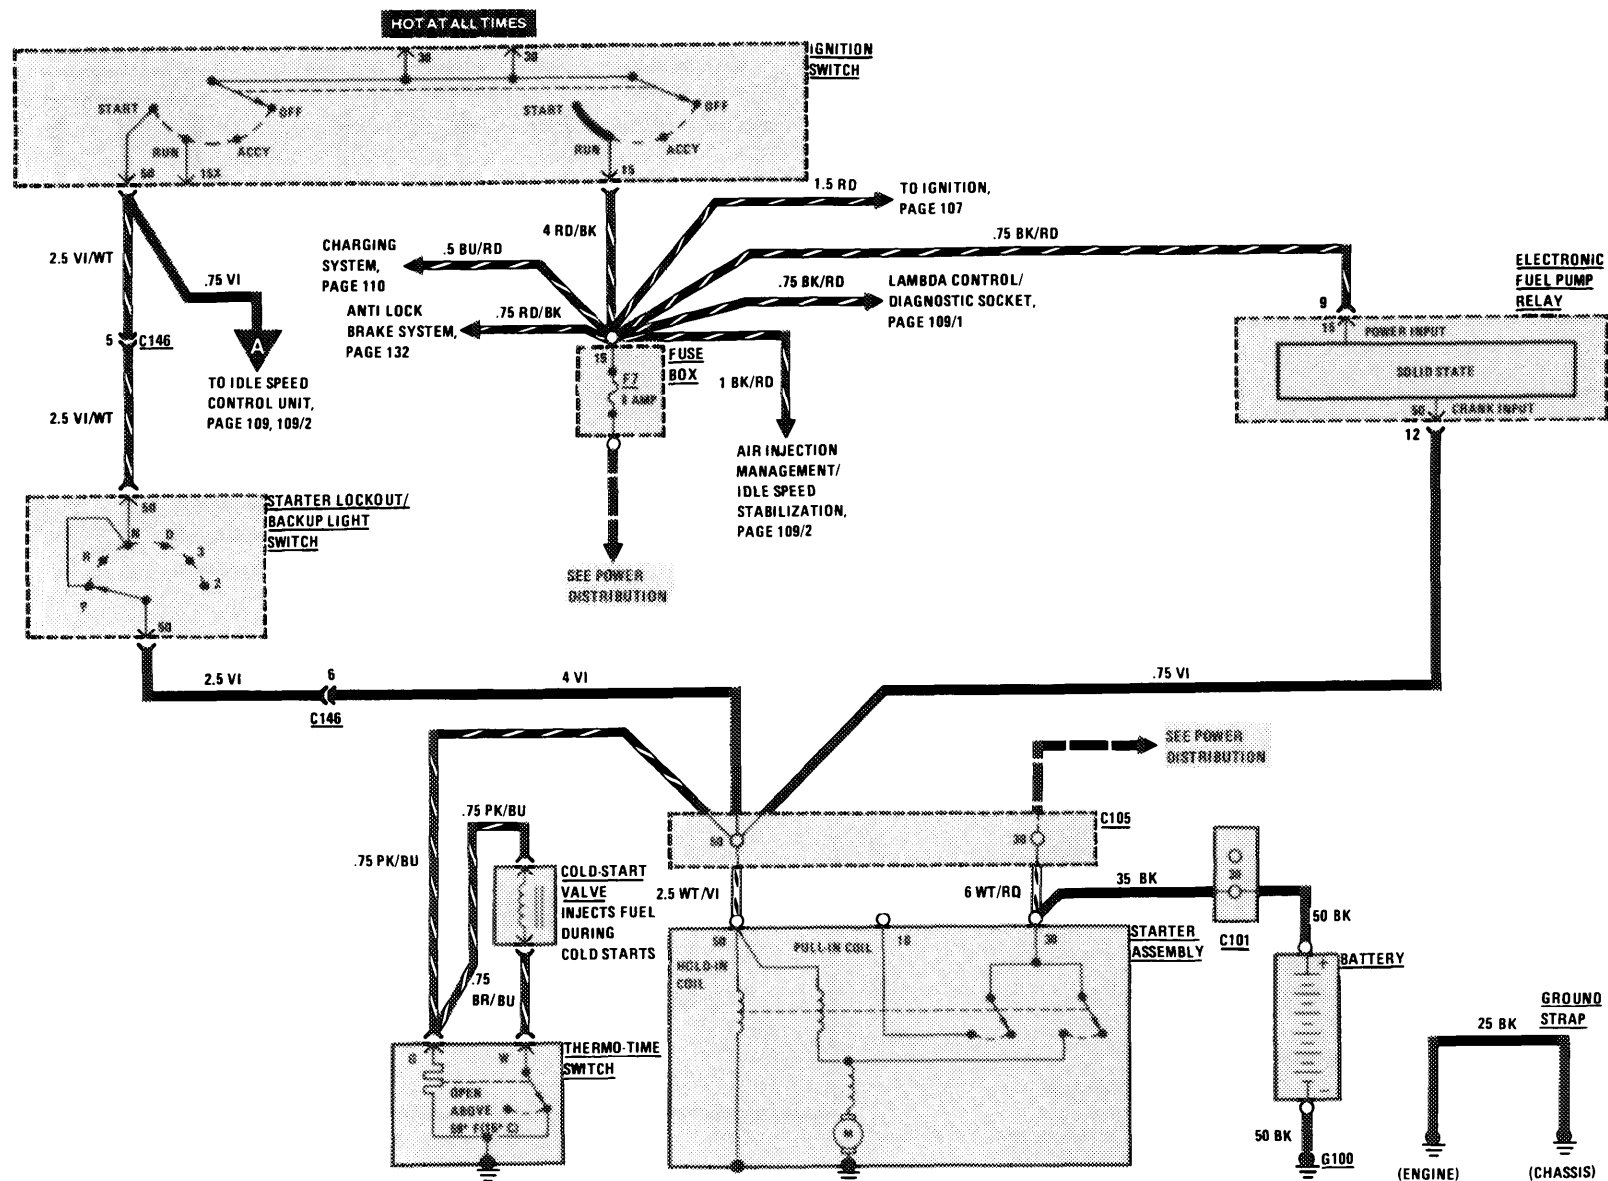

REVISIONS:

IGNITION/FUEL DELIVERY/TRANSMISSION KICKDOWN/DIAGNOSTIC SOCKET MY 1983/ MY 1984/MY 1985

(For Component Locations See Page 207)

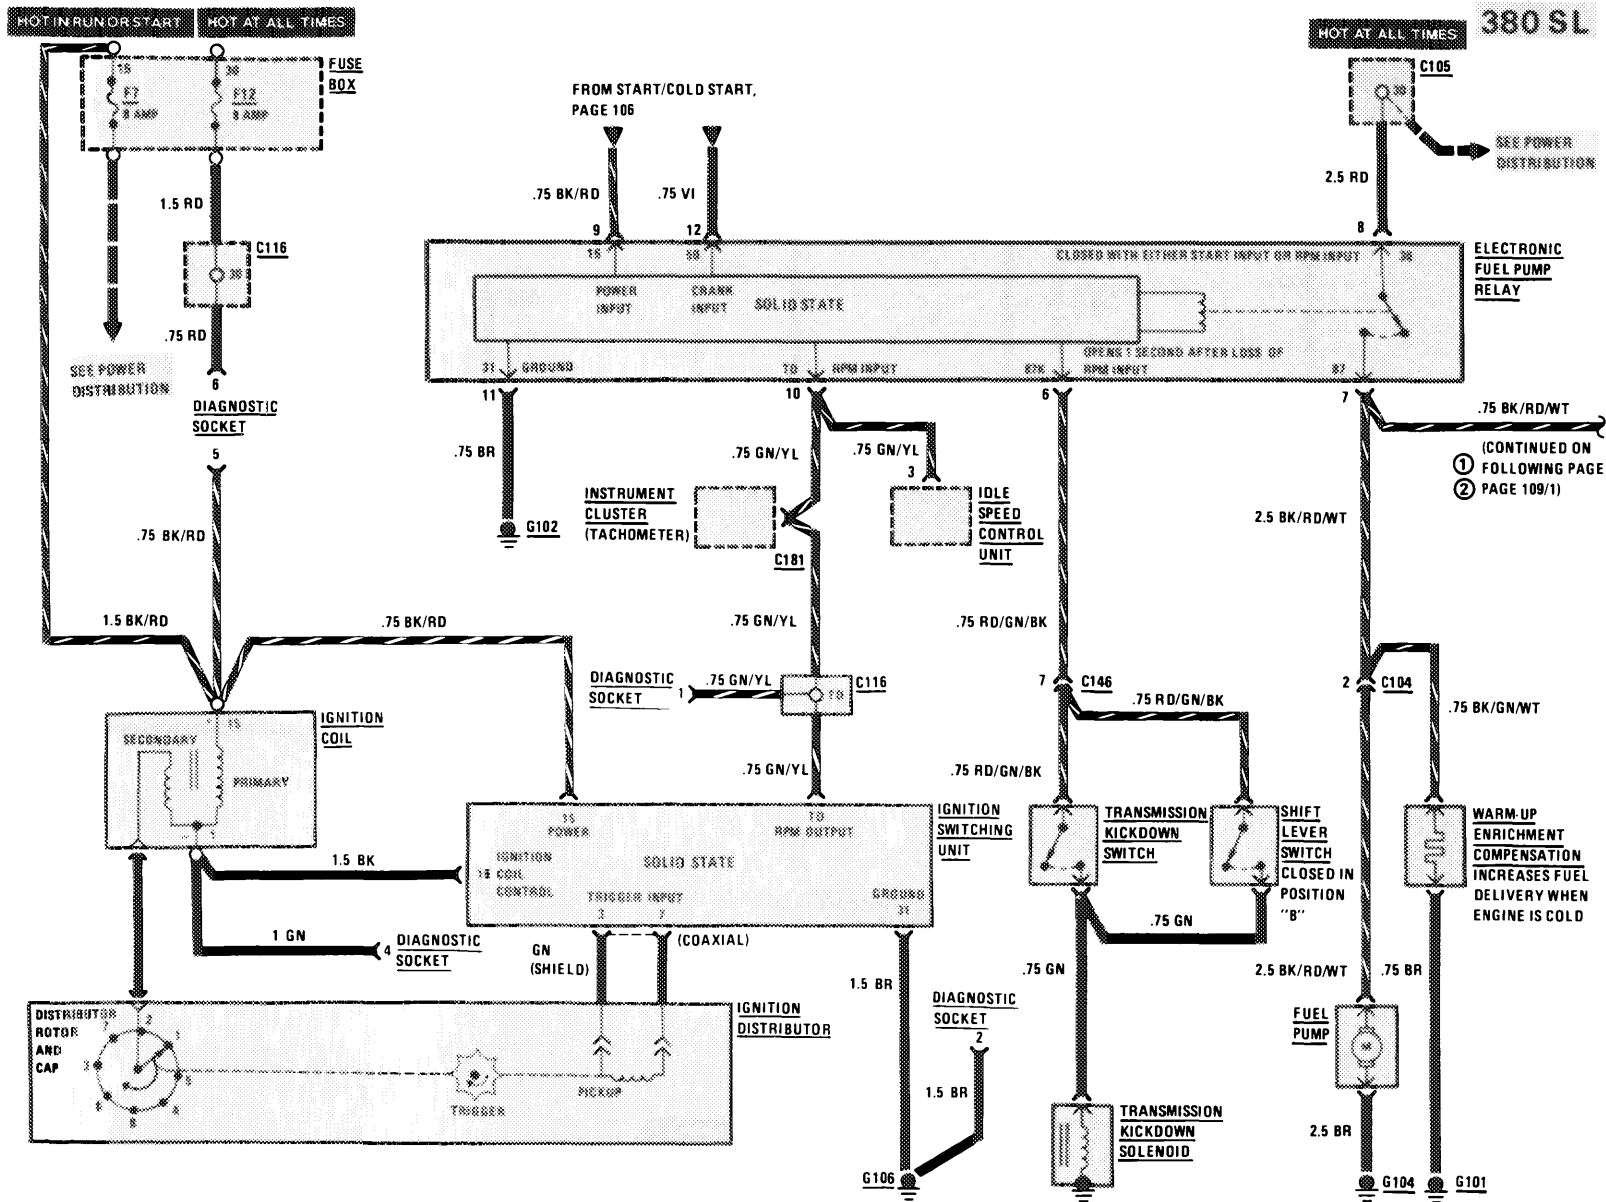


LAMBDA CONTROL/DIAGNOSTIC SOCKET

(For Component Locations See Page 204)

MY 1983/MY 1984

380 SL

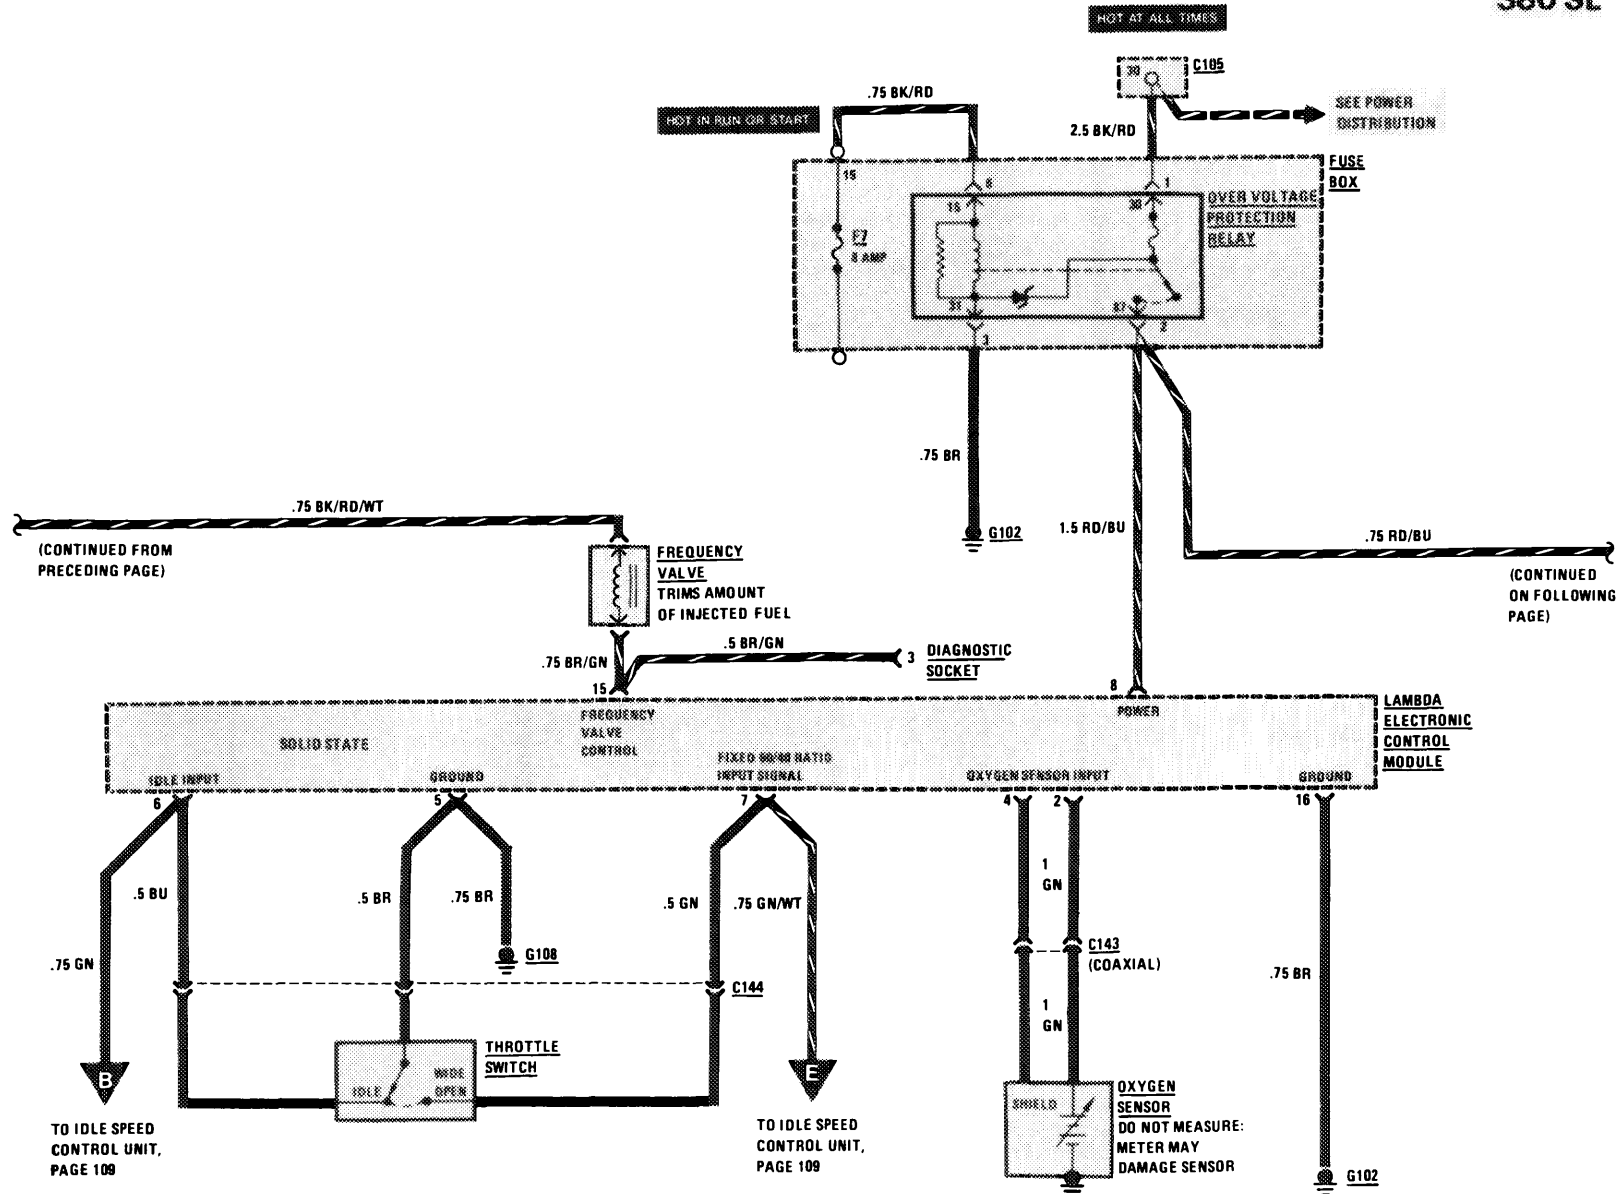


REVISIONS:

AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION

MY 1983/MY 1984

(For Component Locations See Page 204)

380 SL

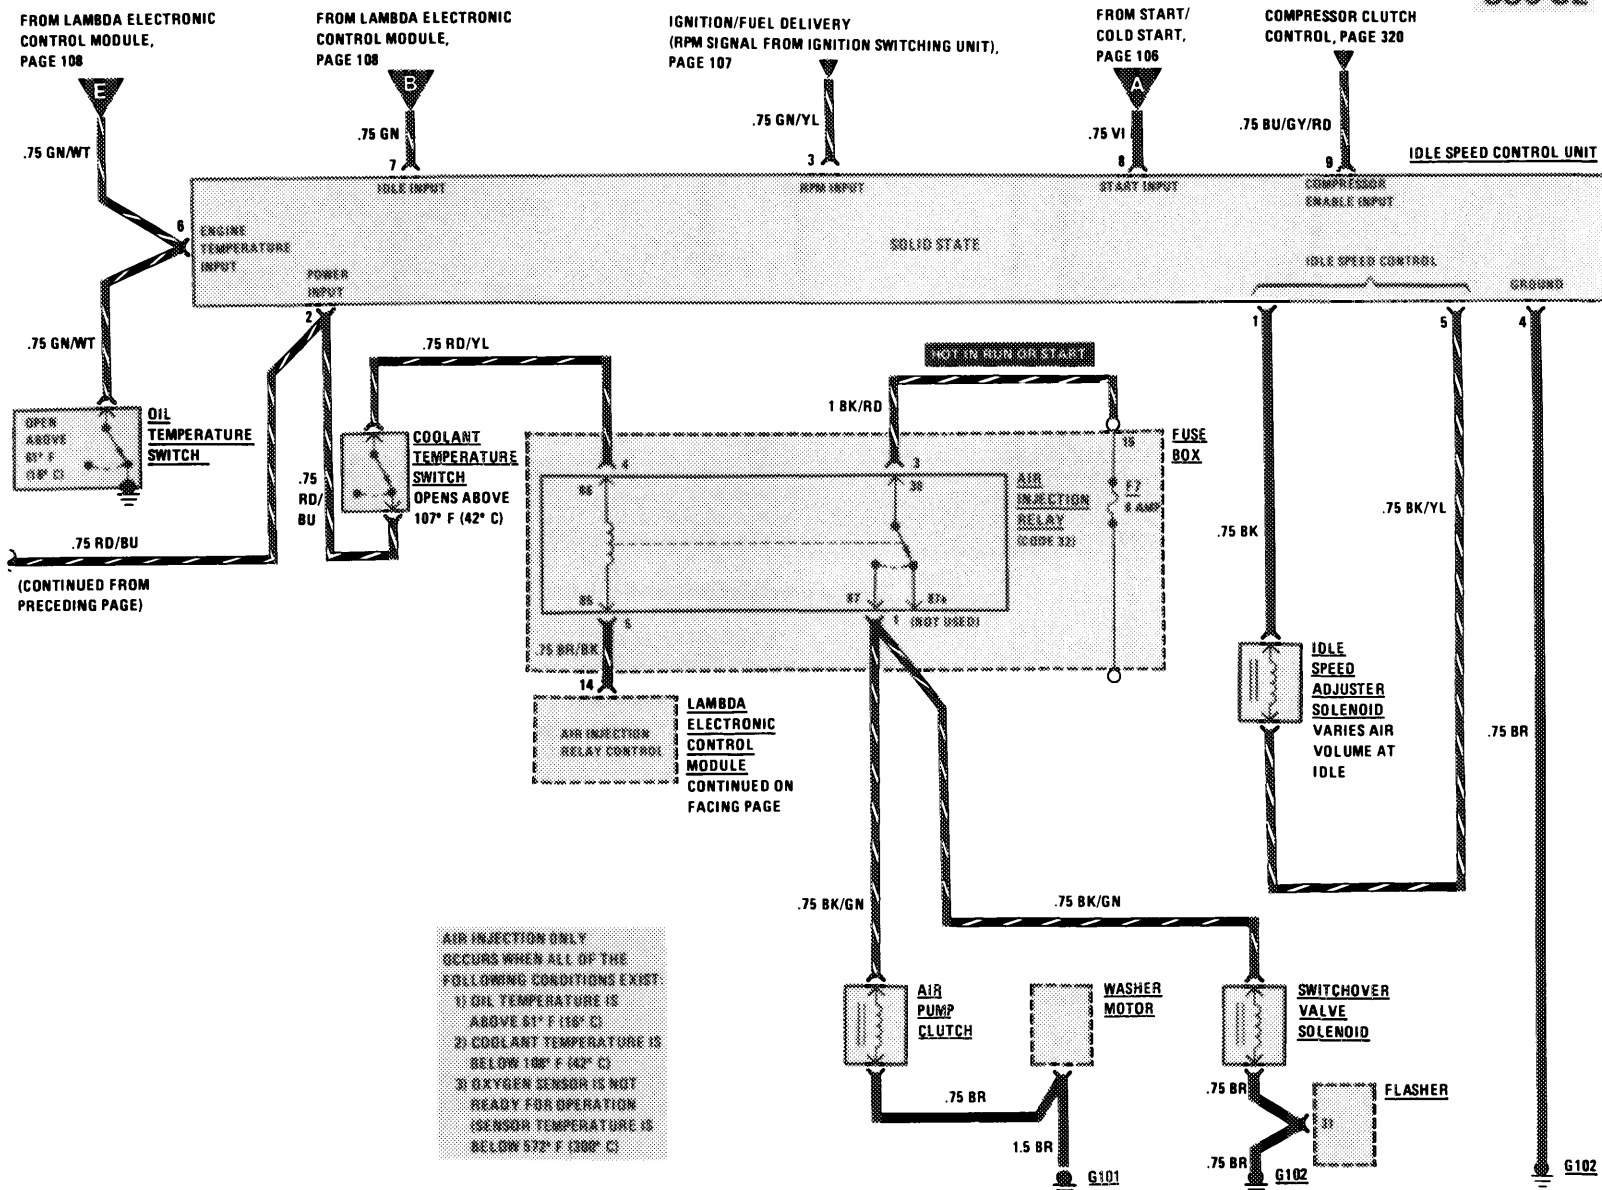


REVISIONS:

LAMBDA CONTROL /DIAGNOSTIC SOCKET

(For Component Locations See Page 204)

MY 1985

380 SL

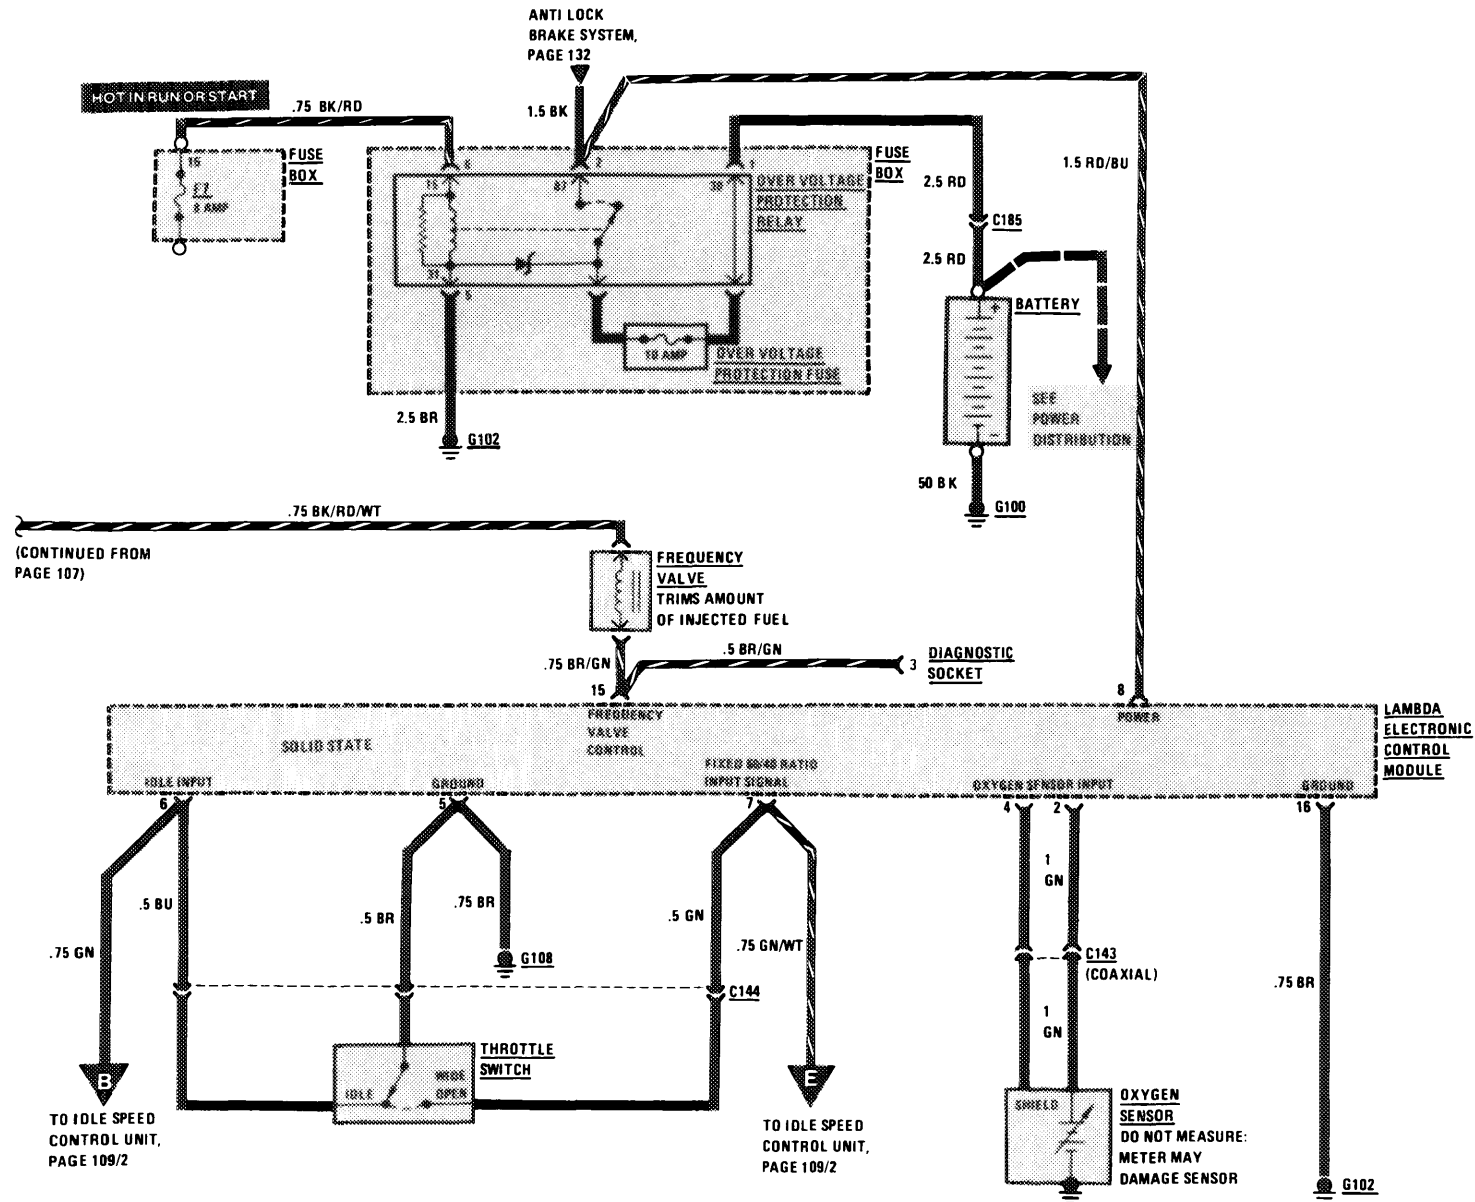

REVISIONS:

109/1

107.045


1/87

AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION

(For Component Locations See Page 204)

MY 1985

380 SL

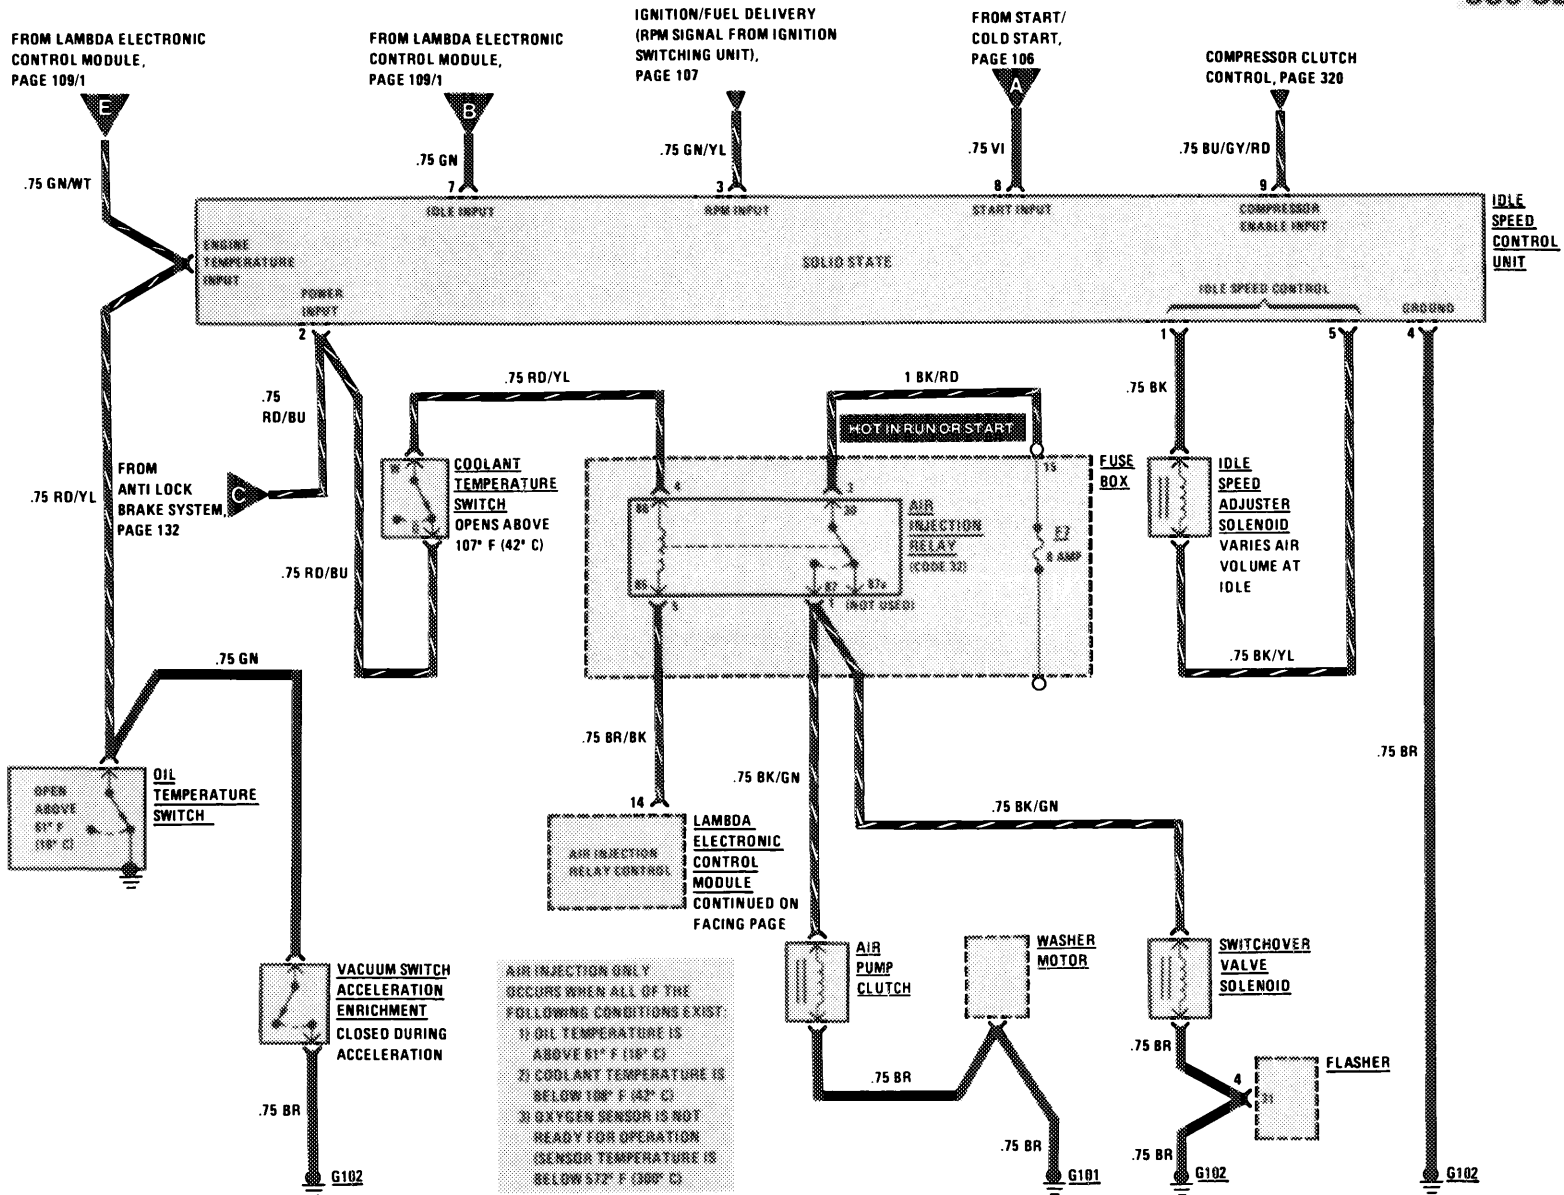

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

CHARGING SYSTEM

(For Component Locations See Page 203)

MY 1983/MY 1984/MY 1985

380 SL

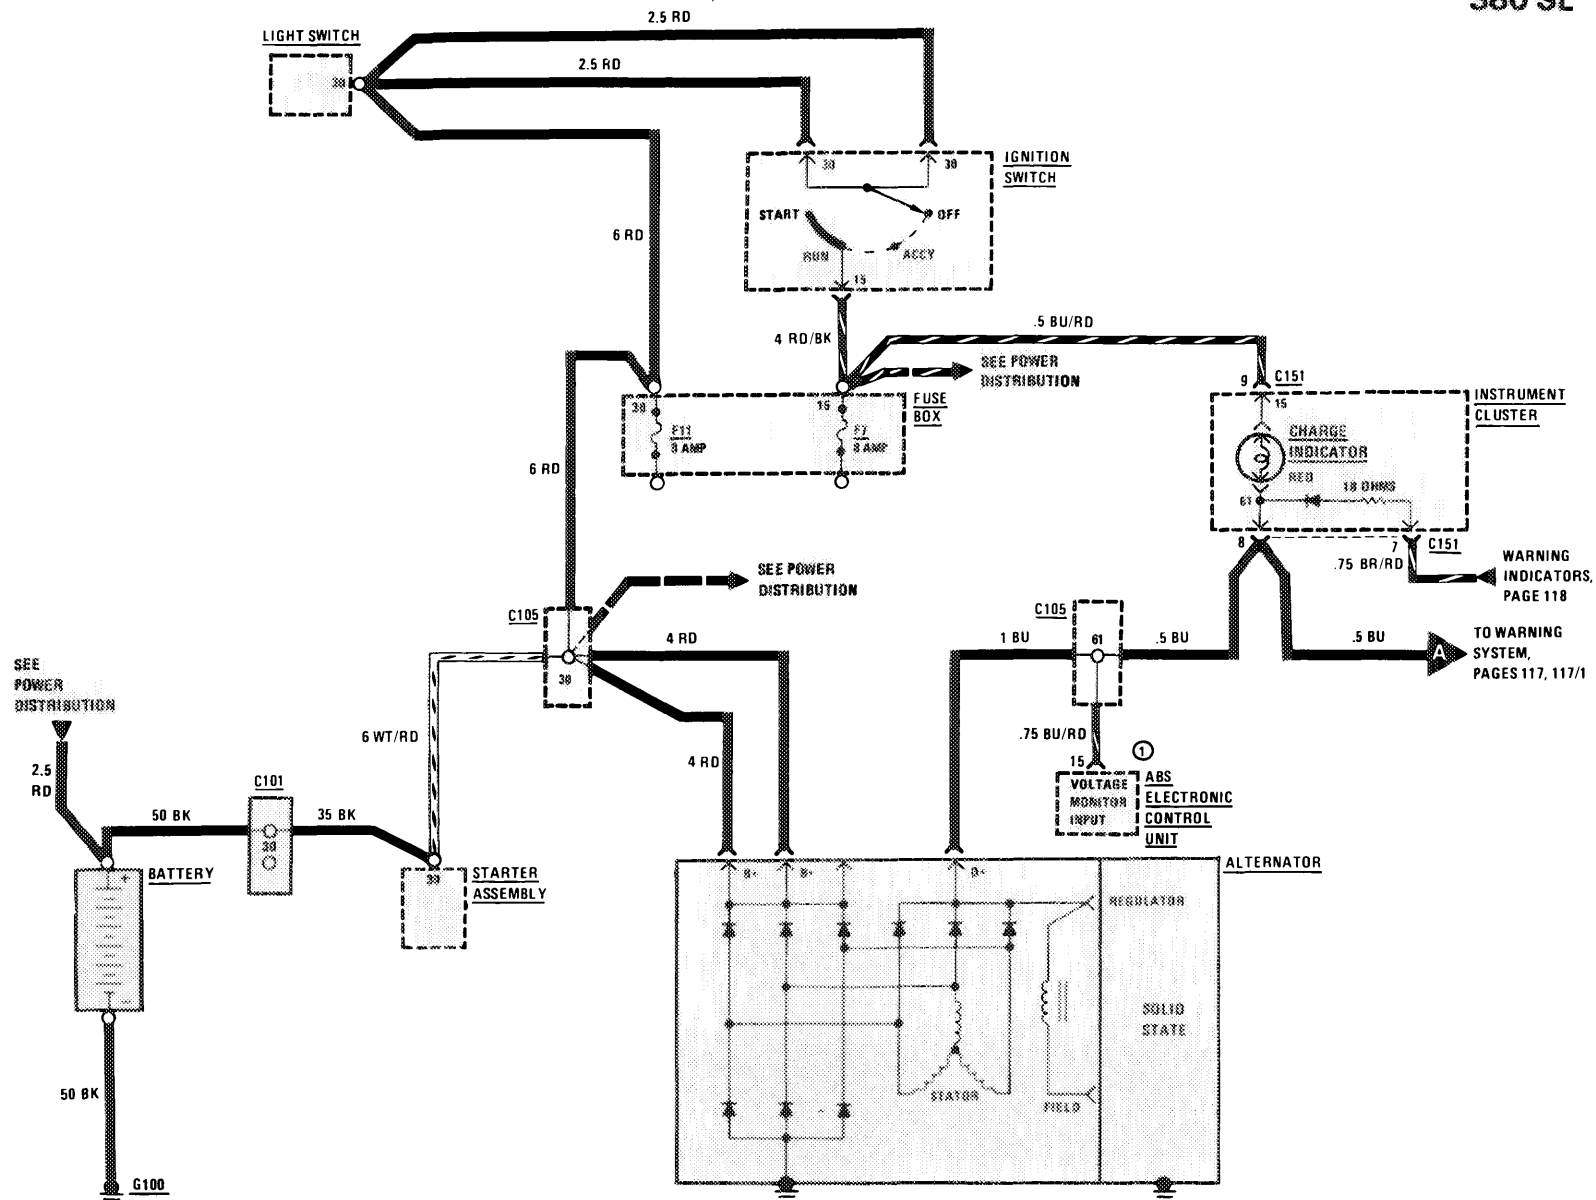


REVISIONS: ① MODEL YEAR 1985

BACKUP LIGHTS

GLOVE BOX LIGHT

(For Component Locations See Page 203)

MY 1983/MY 1984/
MY 1985
380 SL

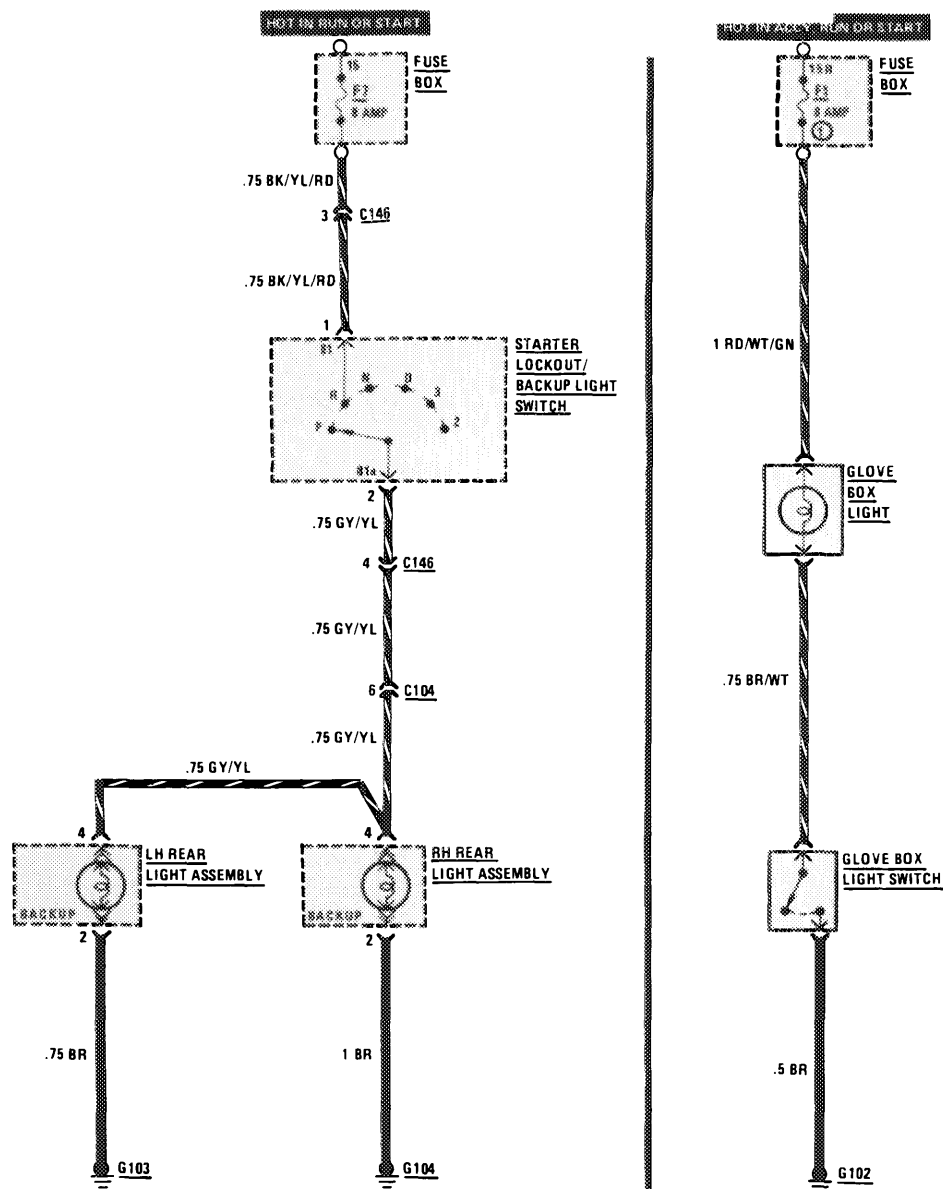

REVISIONS: ① 16 AMP (WHEN EQUIPPED WITH HEATED SEATS)

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

HEADLIGHTS/FOG LIGHTS

(For Component Locations See Page 206)

MY 1983/MY 1984/MY 1985

380 SL

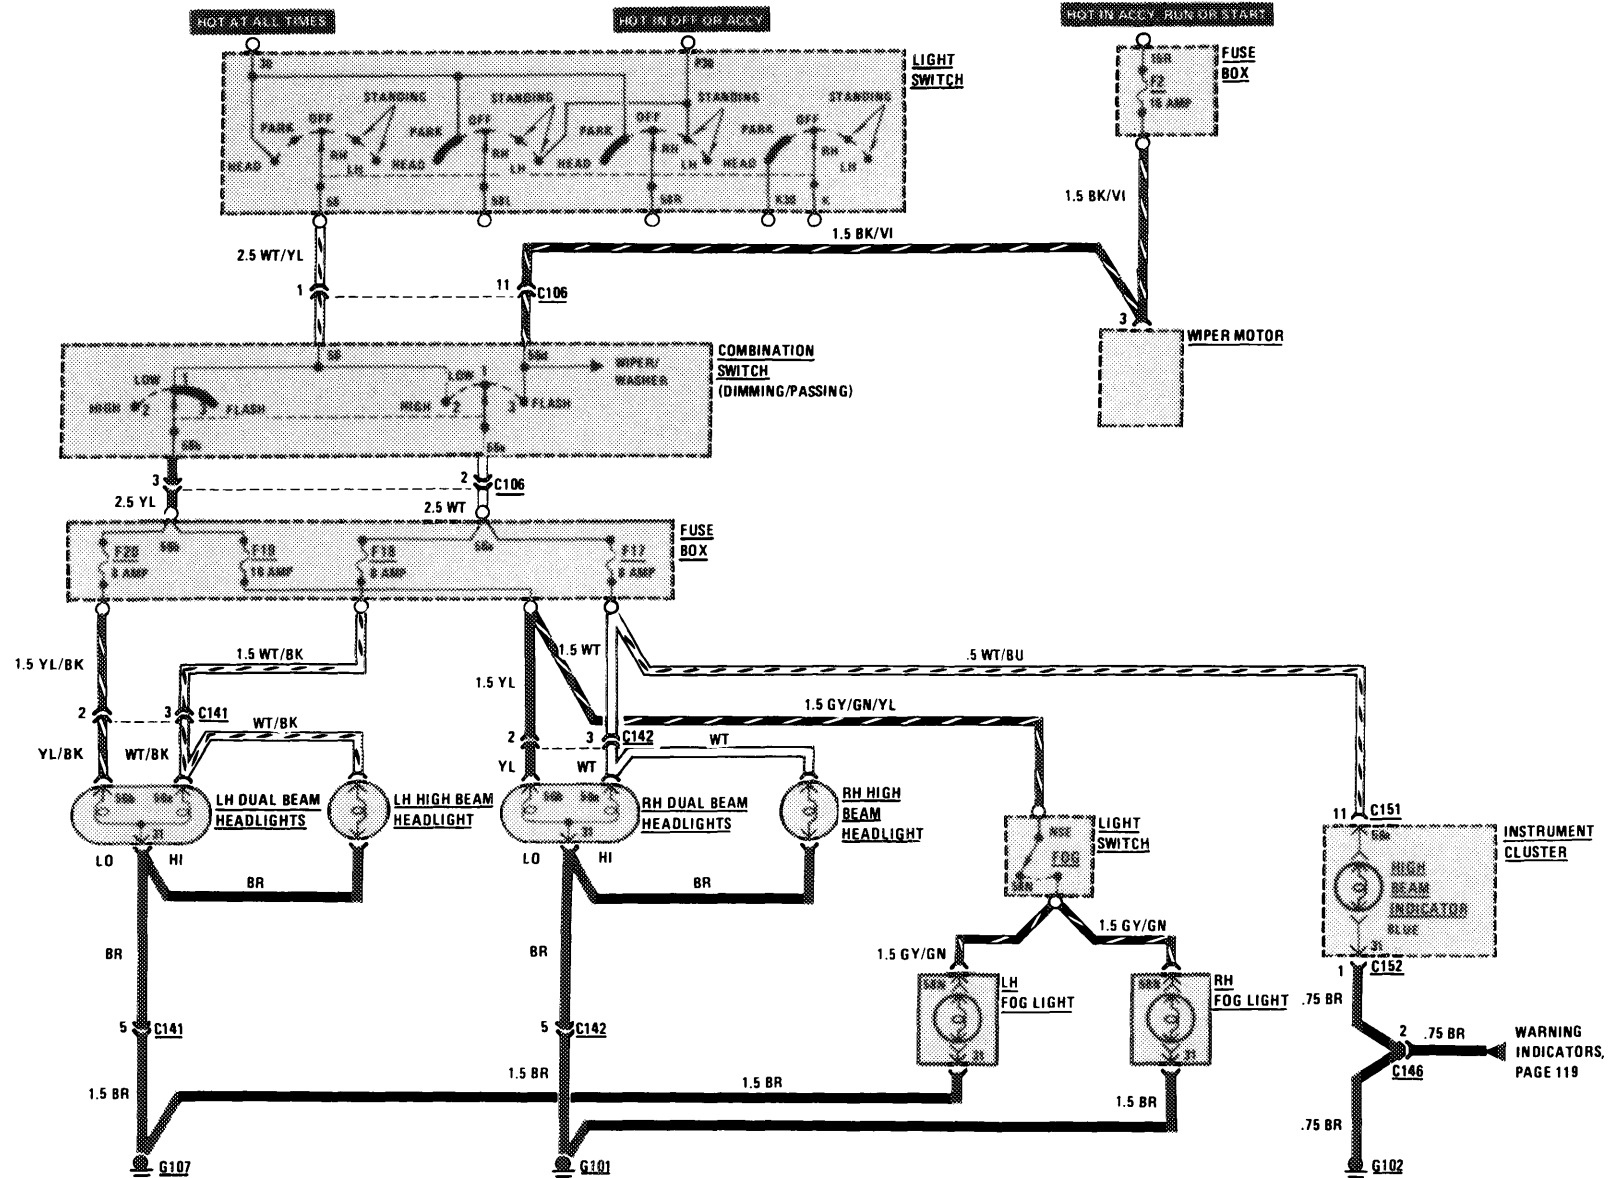

REVISIONS:


THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

(For Component Locations See Page 211)

380 SL

107.045

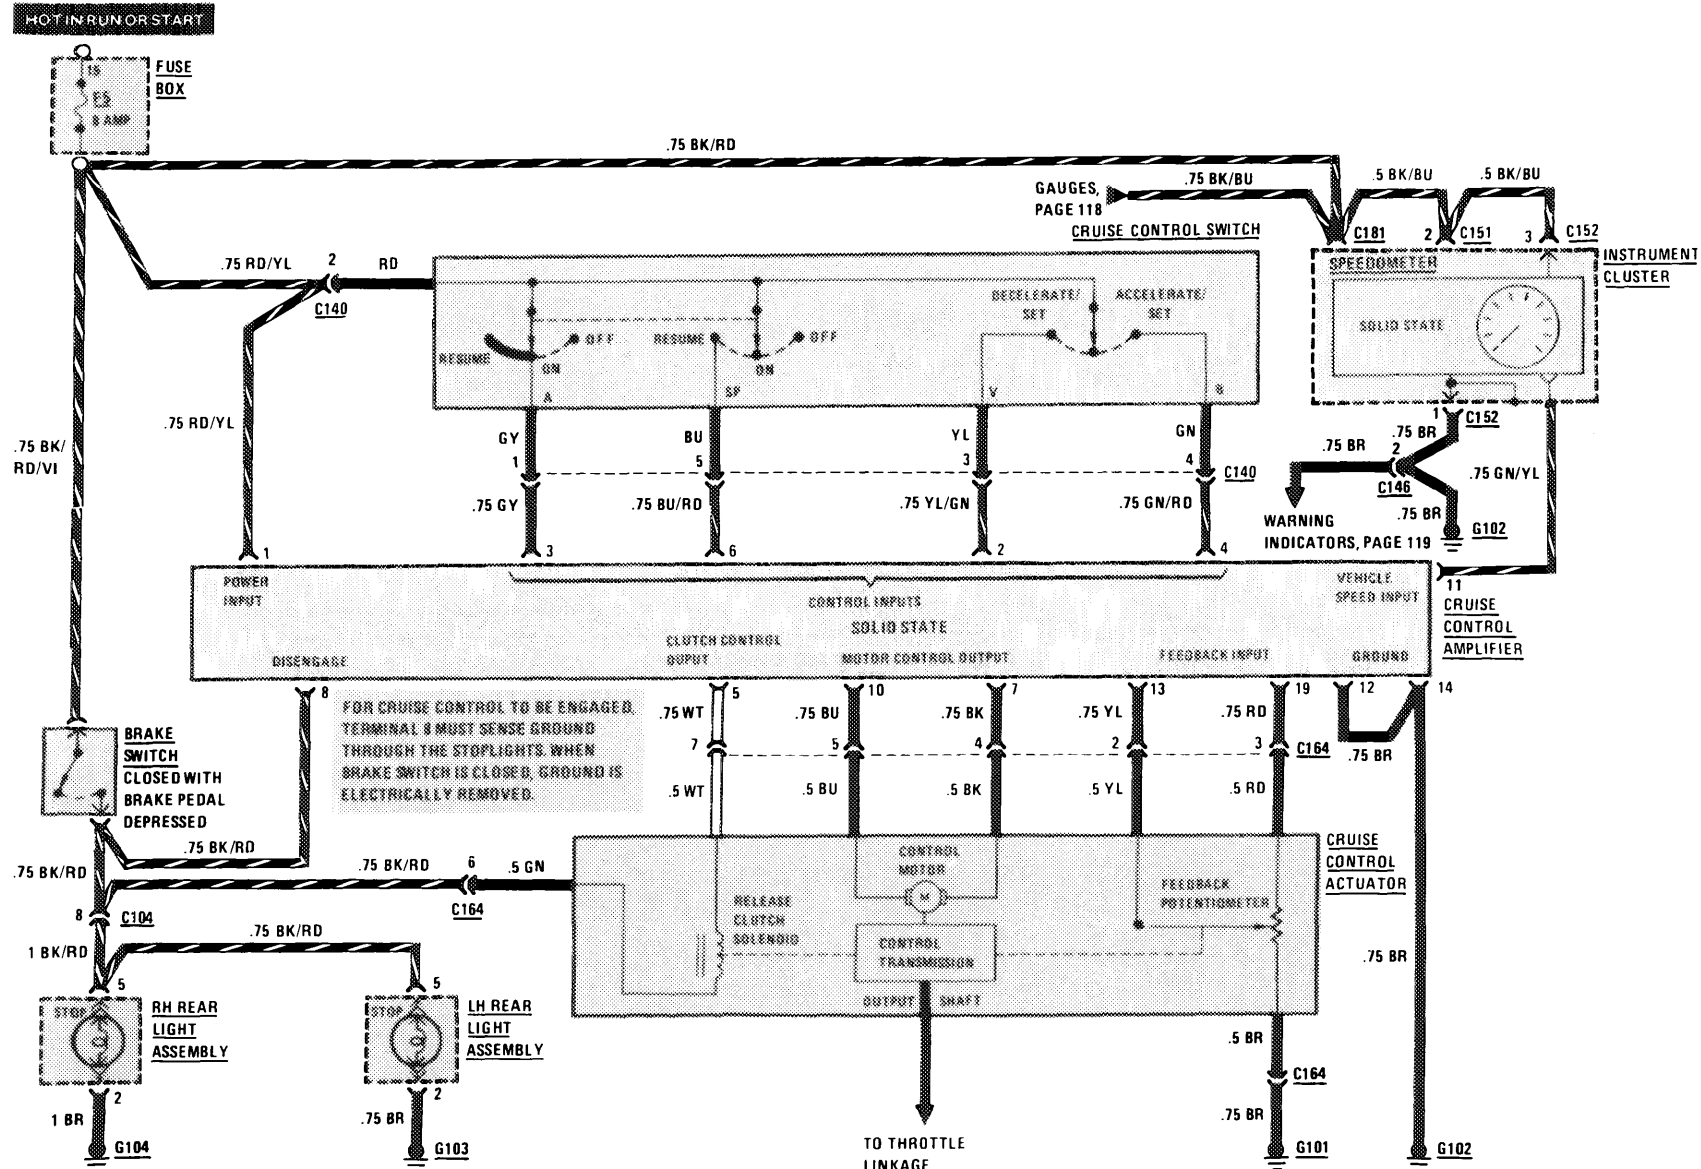


REVISIONS:

STOPLIGHTS/CRUISE CONTROL

(For Component Locations See Page 211)

MY 1984

380 SL

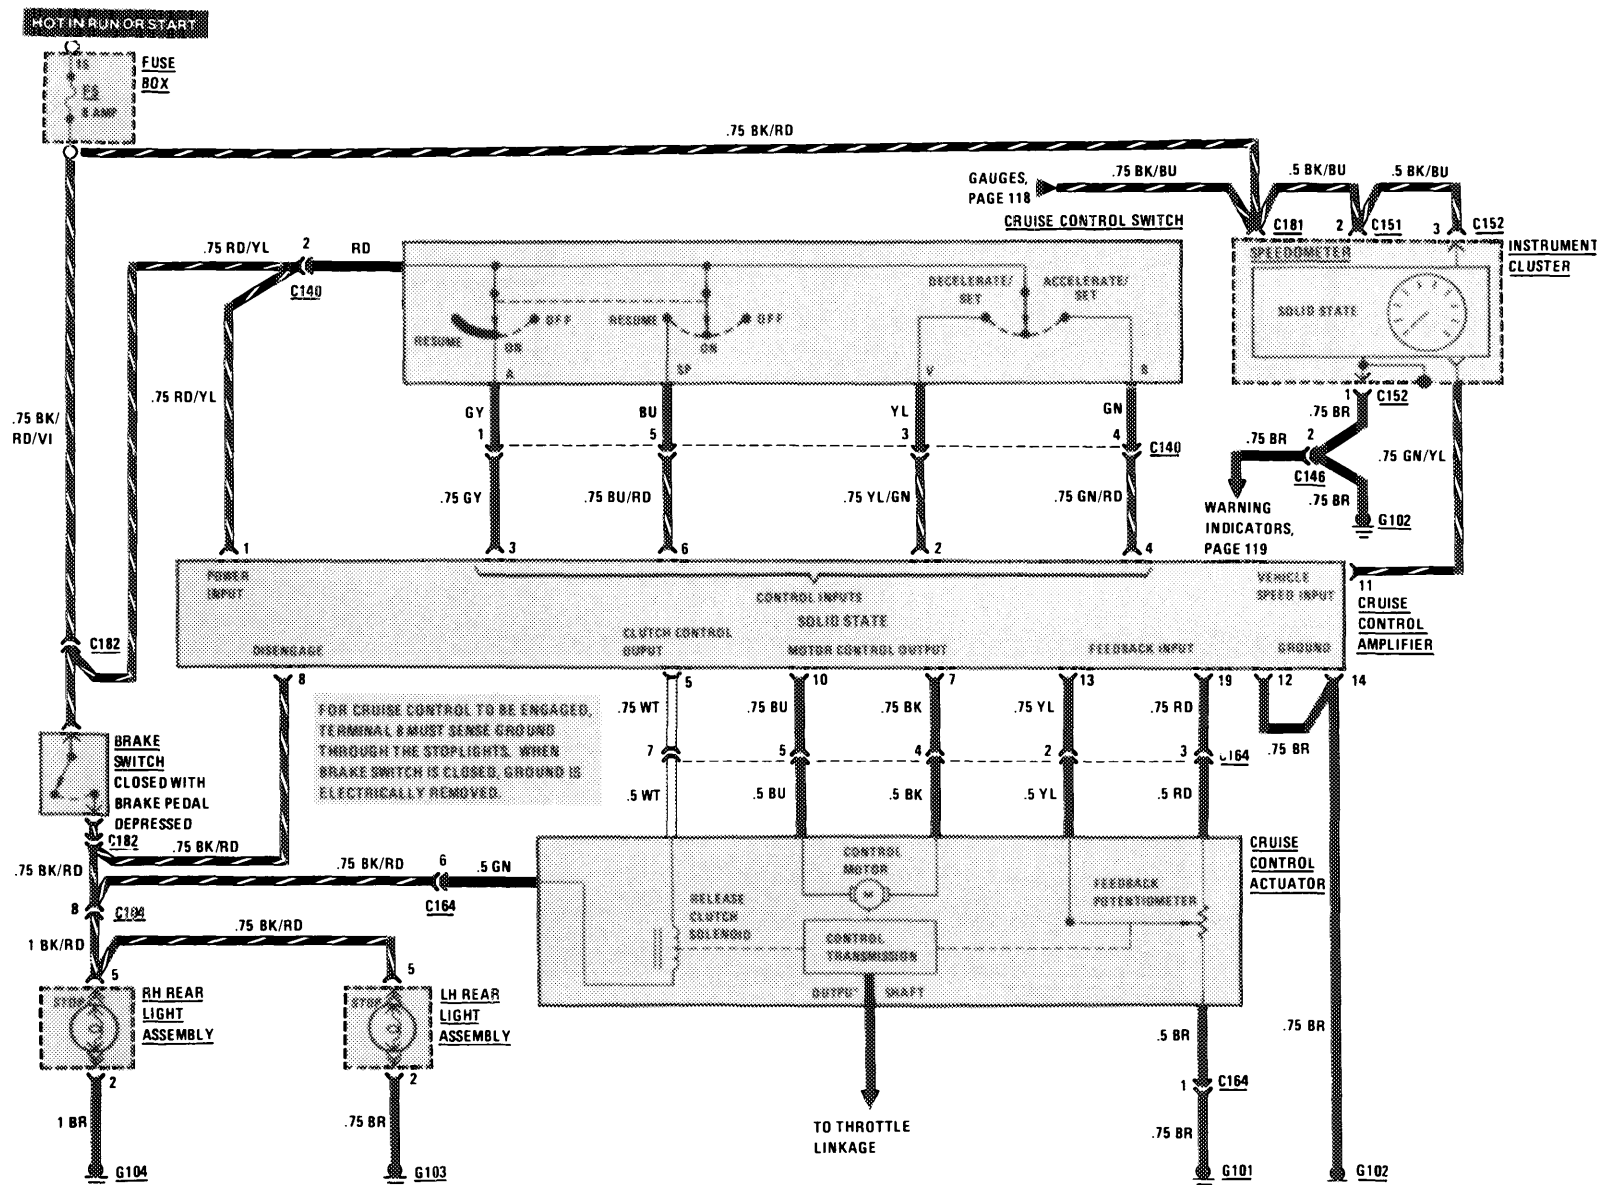

107.045


113

STOPLIGHTS/CRUISE CONTROL

(For Component Locations See Page 211)

MY 1985

380 SL

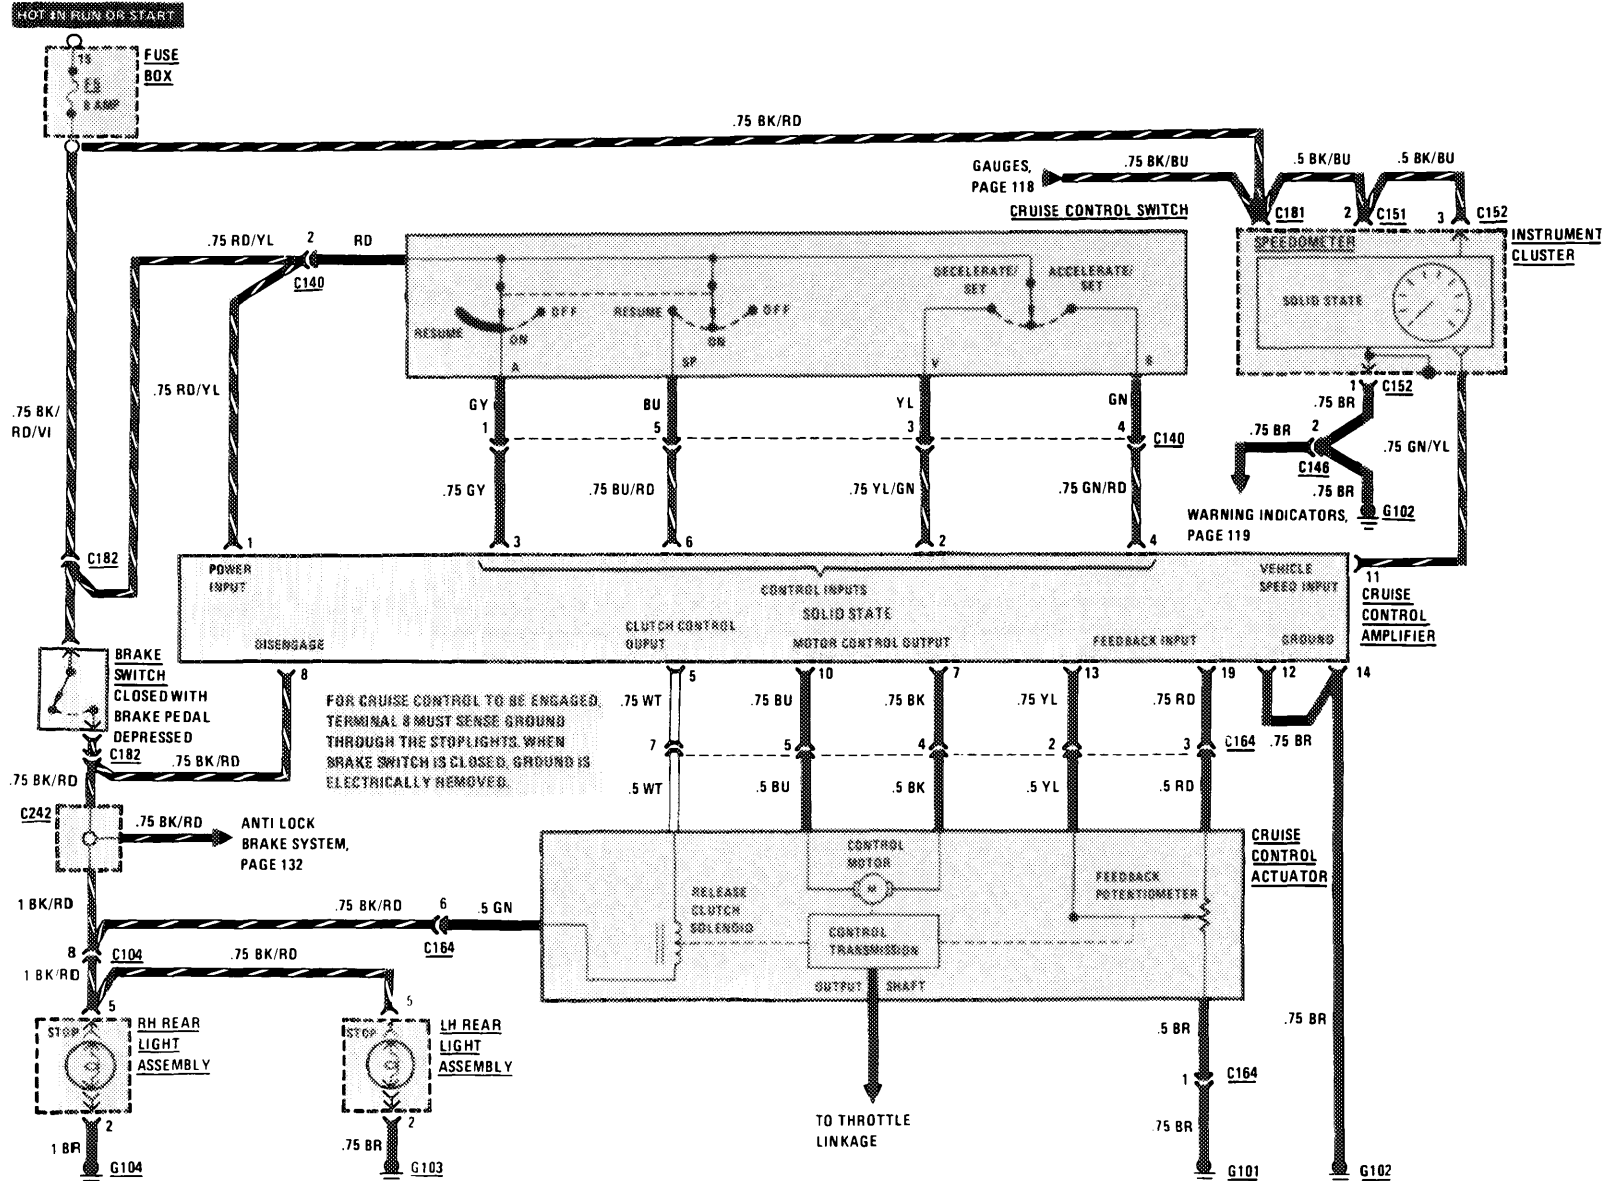

REVISIONS:

113/1

107.045


4/86

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

LIGHTS: PARK/TAIL (For Component Locations See Page 209)


MY 1983/MY 1984/MY 1985
380 SL

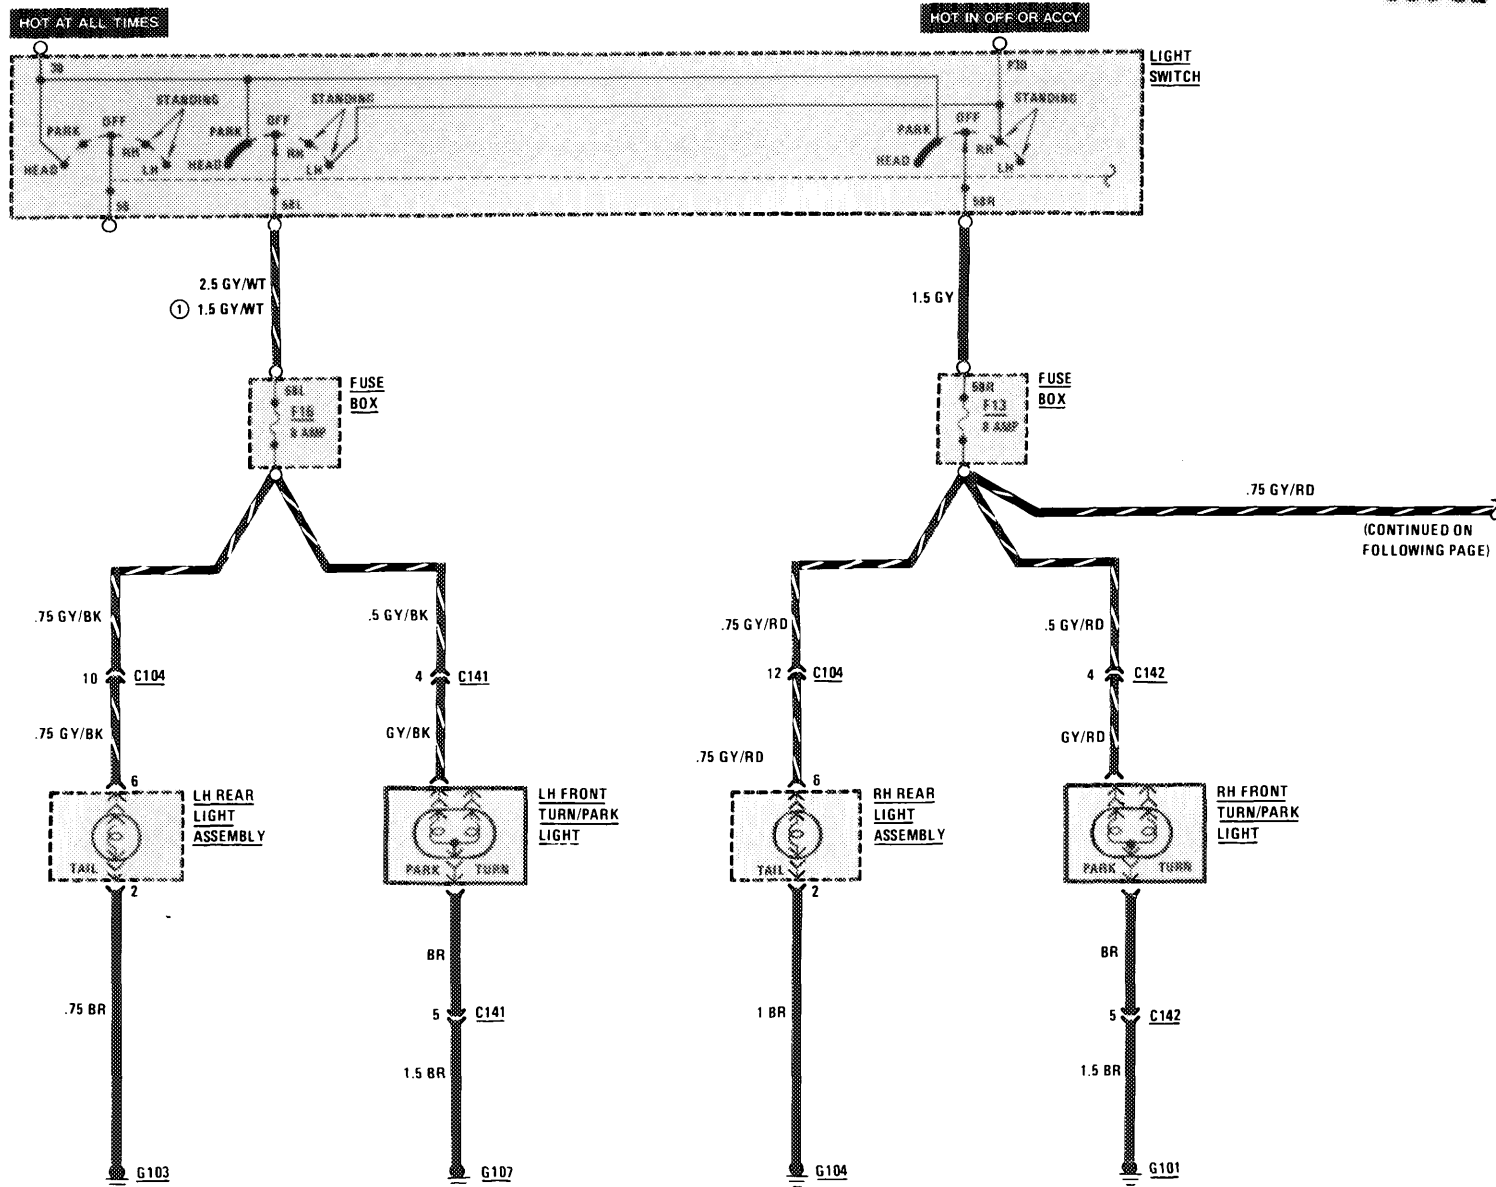

REVISIONS: ① AS OF MODEL YEAR 1985

380 SL

LIGHT
SWITCH



THIS PAGE LEFT BLANK INTENTIONALLY


REVISIONS:

THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

119

107.045

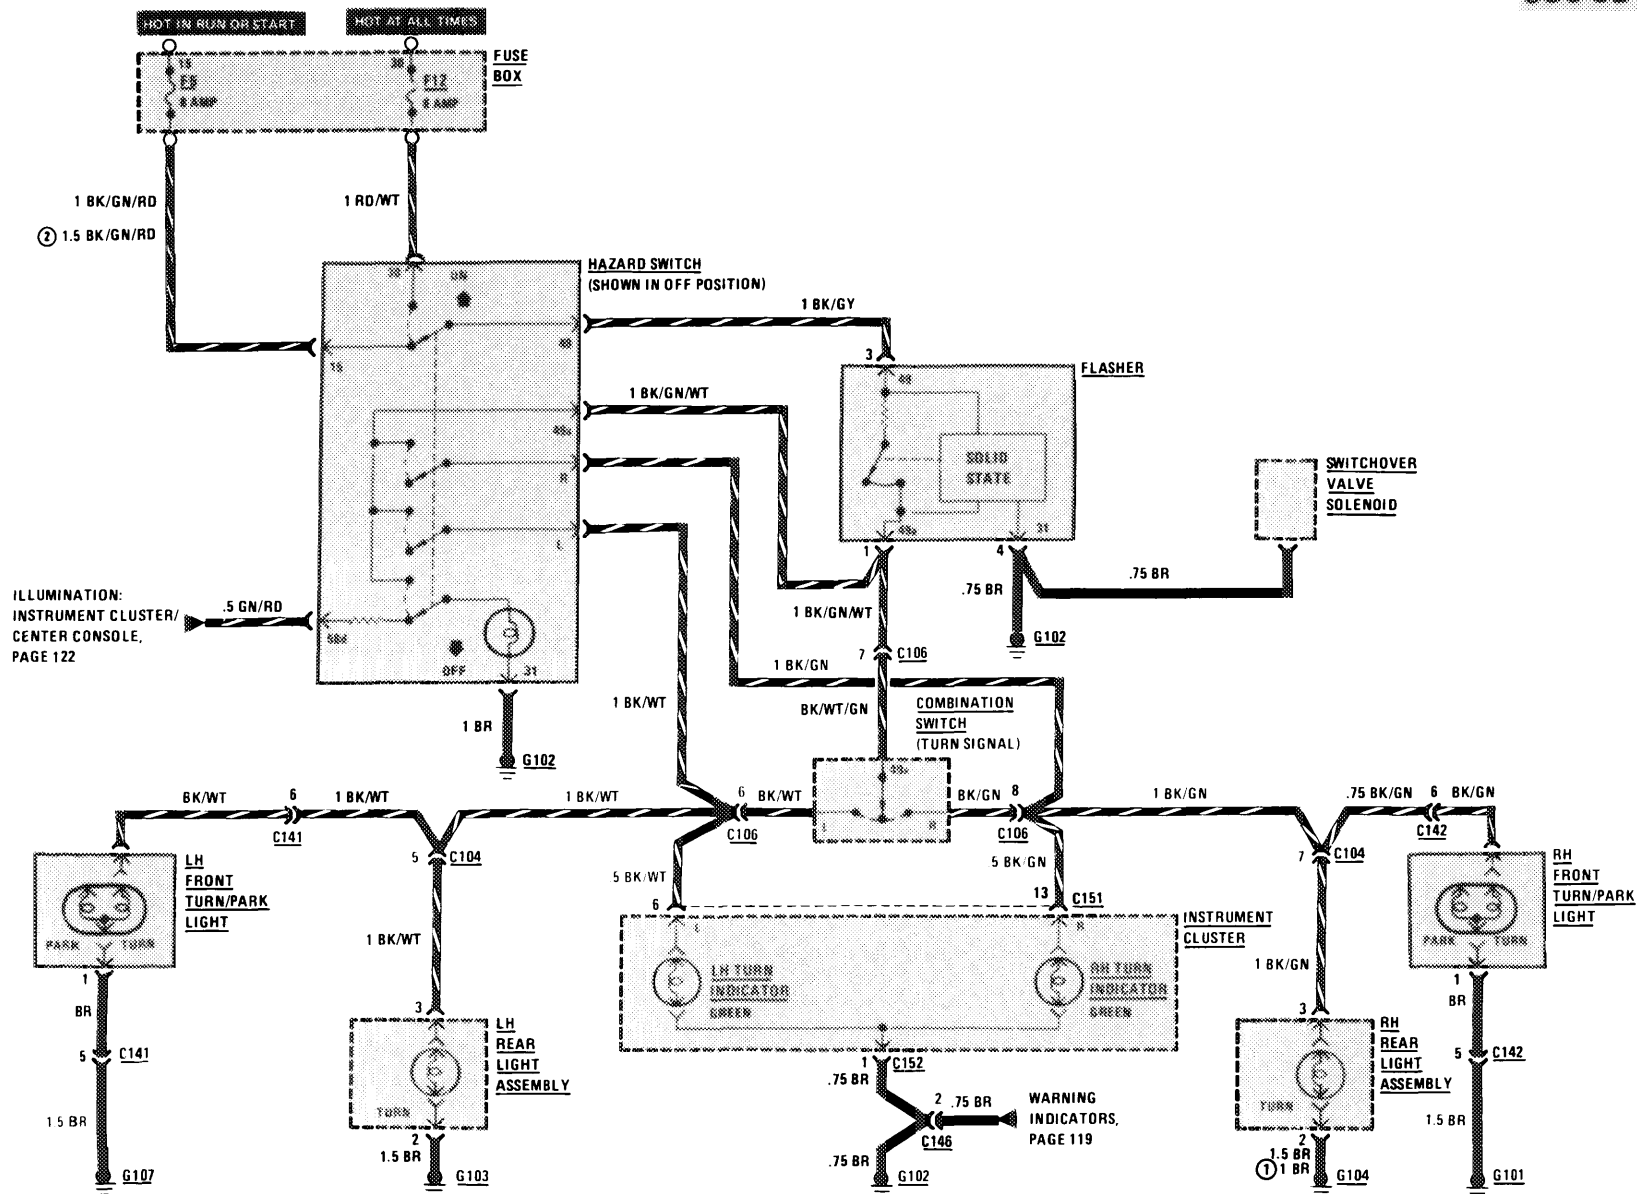


REVISIONS: ① AS OF MODEL YEAR 1984
② MODEL YEAR 1985

WARNING SYSTEM

(For Component Locations See Page 213)


MY 1983/MY 1984

380 SL

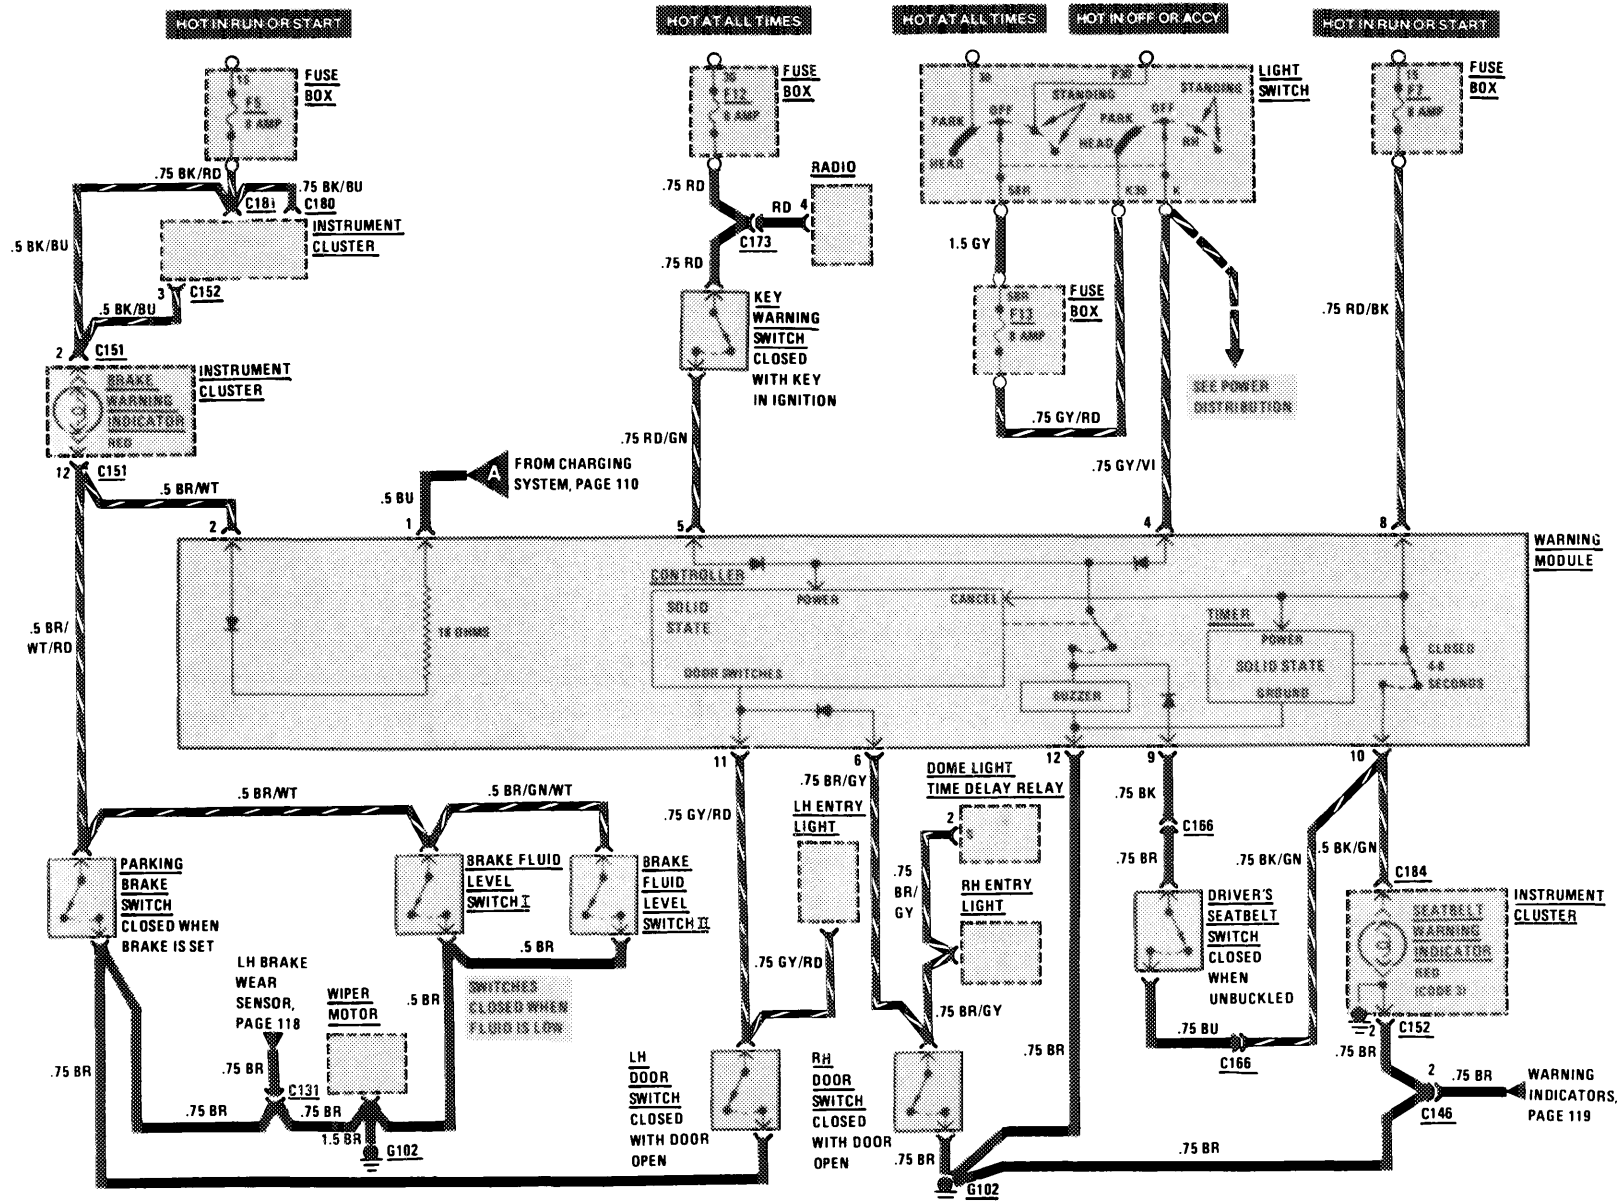


(For Component Locations See Page 213)

380 SL



THIS PAGE LEFT BLANK INTENTIONALLY

REVISIONS:

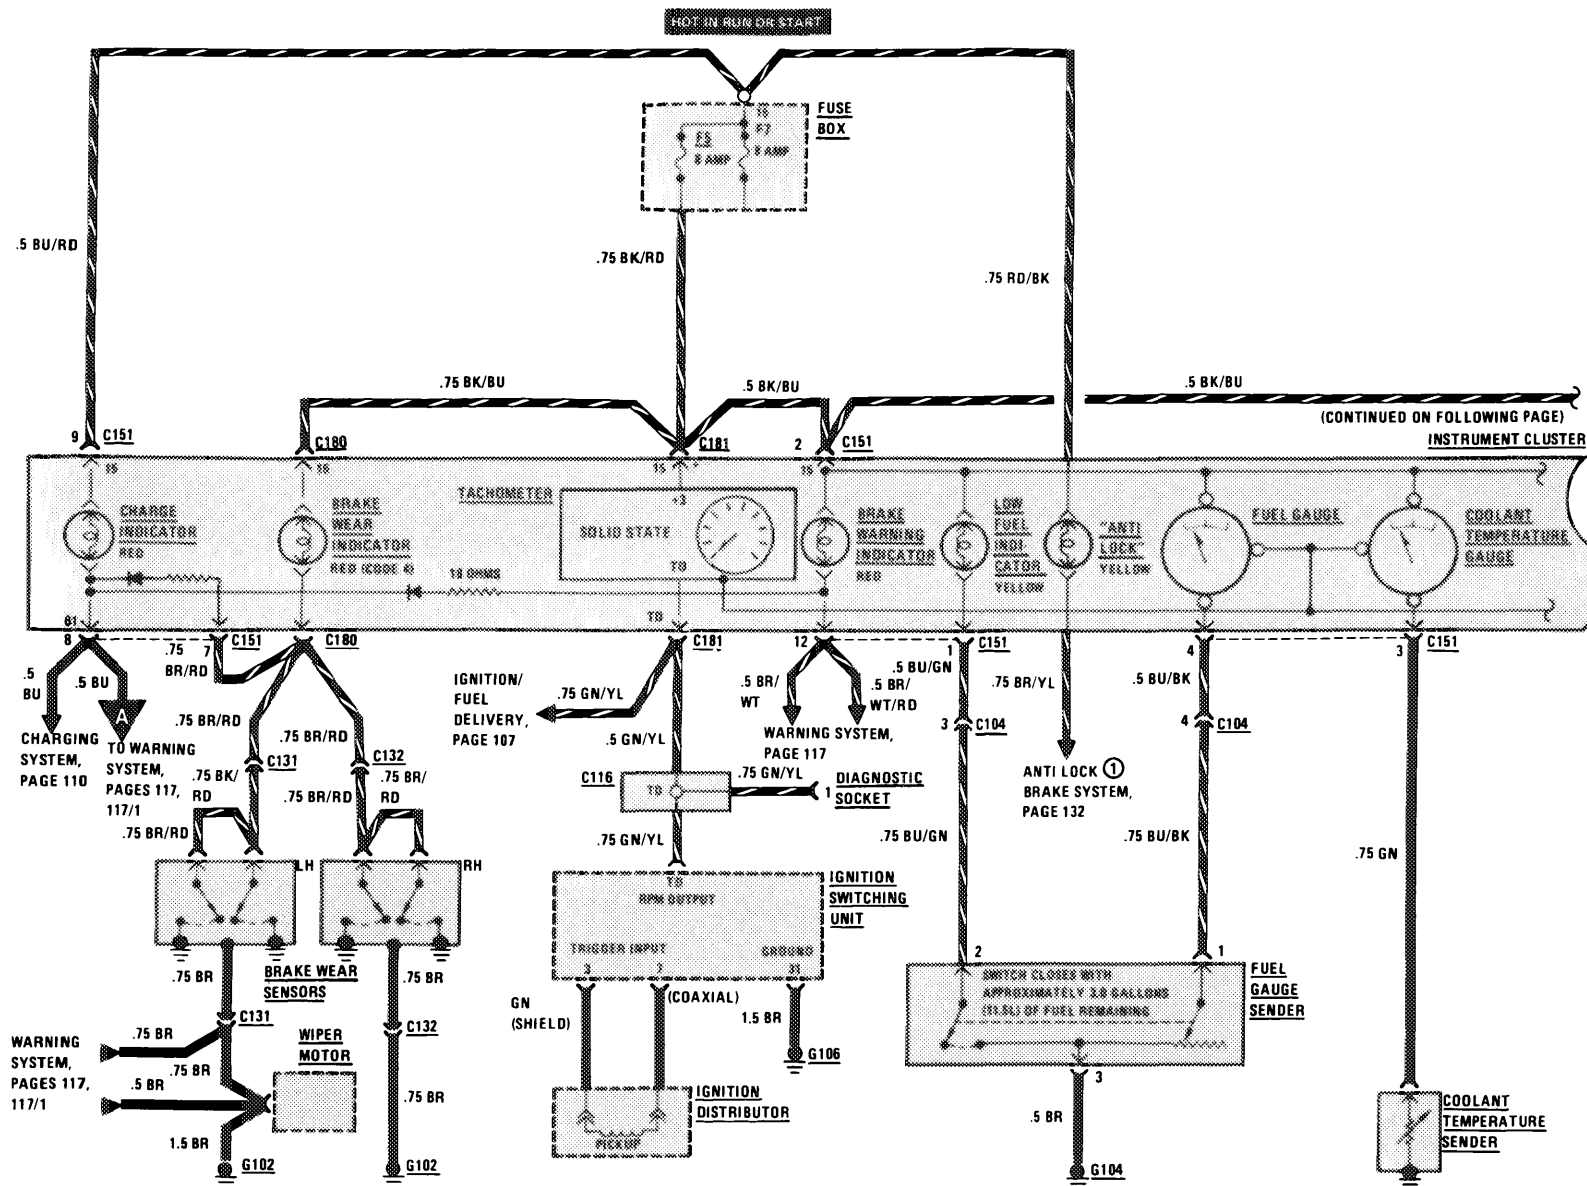

REVISIONS: ① AS OF MODEL YEAR 1985